

ATCA-7480 Quick Start Guide

P/N:6806800T34A (February 2015)

1 What's in the box?

Make sure you receive all items of your shipment:

- One ATCA-7480 blade
- One printed copy of Quick Start Guide (this document)
- One printed copy of Safety Notes Summary
- Any optional items ordered



When installing or servicing the module or accessories, strictly observe the safety precautions in the Safety Notes Summary. Otherwise, personal injury or property damage may occur.

2 Observe ESD-safe measures

- Use either a properly grounded ESD wrist strap or make sure that you are working in an ESD-safe environment.
- Connect to the ESD connector at the front or the rear of the system.

3 Prepare the installation site

- For information on the environmental and power requirements, see the *ATCA-7480 Installation and Use* manual.
- Operating temperatures refer to the temperature of the air circulating around the blade and not to the actual component temperature.

4 Install the DIMM

Note:

- Some blade variants come with the DIMM already installed.
 - For thermal safety concerns, no 4-rank DIMMs and stacked DIMMS are allowed.
1. Remove the blade from the system.
 2. Open the locks of the memory module socket.
 3. Press the memory module carefully into the socket. As soon as the memory module is fully inserted, the locks automatically get closed.
 4. If necessary, repeat steps 2–3 to install additional memory modules.



5 Install the MO-297 SSD module

1. Remove the blade from the system.
2. Plug the MO297 SSD module into the ATCA-7480-MMOD carrier.
3. Reinstall the blade into the system.
For more information on installing, refer *ATCA-7480 MMOD-SSD-KIT Quick Start Guide*.

6 Install the Blade

The following procedure assumes that the system is powered. If it is unpowered, you can disregard the blue LED and skip its respective step.

1. Slide the latch into the release position and pull out the handle outward to unlatch the handle from the faceplate. Do not rotate the handle fully outward.
2. Insert the blade into the shelf by placing the top and bottom edges of the blade in the card guides of the shelf. Make sure that the guiding module of shelf and blade are aligned properly.
3. Apply equal and steady pressure to the blade to carefully slide the blade into the shelf until you feel resistance. Continue to push the blade gently until the blade connectors engage.

6 Install the Blade (contd...)

4. Fully insert the blade and turn the handle towards the faceplate. The latches automatically slide inwards and lock the handles. If the shelf is powered, as soon as the blade is connected to the backplane power pins, the blue LED is illuminated. When the blade is completely installed, the blue LED starts to blink. This indicates that the blade has signified its presence to the shelf management controller.
5. Wait until the blue LED is switched off and then fasten the faceplate screws, which secure the blade to the shelf. When the blue LED is switched off and the green LED (IS) is switched on, this indicates that the payload has been powered up and the blade is active.
6. Connect cables to the faceplate, if applicable.
Note: If an RTM is connected to the front blade, make sure that the handles of both the RTM and the front blade are closed in order to power up the blade's payload.

Finding more information

For more information on the product, see the *ATCA-7480 Installation and Use* and other related documentation.

Go to www.artesyn.com/computing/support/product/technical-documentation.php for technical documentation.

Technical Assistance

To request technical assistance, visit <http://crcportal.artesyn.com/>