

# **ARTESYN LCM600 SERIES**

600 Watts Bulk Front End



#### PRODUCT DESCRIPTION

Advanced Energy's Artesyn LCM600 series provide for a very wide range of AC-DC embedded power requirement. Featuring high build quality with robust screw terminals, long life, and 89 percent typical efficiency, these units are ideal for use in industrial and medical applications. They are backed by a comprehensive set of industrial and medical safety approvals and certificates. Variable-speed 'Smart Fans' draw on software controls developed by Advanced Energy to match fan speed to the unit's cooling requirement and load current. Slowing the fan not only saves power but also reduces wear, thus extending its life.

### AT A GLANCE

#### **Total Power**

600 Watts

#### **Input Voltage**

85 to 264 Vac

#### # of Outputs

Main + Standby





### SPECIAL FEATURES

- 600W output power
- Low cost
- 2.4"X4.5"X7.5"
- 7.41W/in<sup>3</sup>
- Optional 5V @ 2A housekeeping
- Industrial/medical safety
- -40°C to +70°C with derating
- High efficiency 89% typical
- Variable speed "Smart Fans"
- DSP controlled front end
- Conformal coat option
- ±20% adjustment range
- Margin programming
- OR-ing FET
- Terminal block input option

### SAFETY

■ UL/CSA: UL/CSA62368-1

■ UL/CSA: ES60601-1

CSA C22.2

No.60601-1

FN62368-1

TUV:

TUV: EN60601-1 ■ UKCA Mark

CCC: GB4943

GB9254

GB17625

■ CB Report:

IEC60950-1

IEC60601-1

## **MODEL NUMBERS**

| Standard <sup>1</sup> | Output Voltage | Minimum Load | Maximum Load² | Adjustment Range | Maximum Power <sup>3</sup> |
|-----------------------|----------------|--------------|---------------|------------------|----------------------------|
| LCM600L               | 12Vdc          | 0A           | 52A           | 9.6 - 14.4Vdc    | 600W                       |
| LCM600N               | 15Vdc          | 0A           | 44A           | 12.0 - 19.5Vdc   | 600W                       |
| LCM600Q               | 24Vdc          | 0A           | 27A           | 19.2 - 28.8Vdc   | 600W                       |
| LCM600U               | 36Vdc          | 0A           | 16.7A         | 28.8 - 43.2Vdc   | 600W                       |
| LCM600W               | 48Vdc          | 0A           | 13A           | 38.4 - 57.6Vdc   | 600W                       |

Note 1 - Add "-T" for terminal block instead of IEC input. Add "-4" for 5V standby.

Add "-8" for constant current mode. Add "-A" for new aesthetics.

Add "-N" for low noise model on 12 V or 24 V models.

Note 2 - Maximum load current can be extended but output voltage needs to be adjusted to minimum value to meet 600W output power. If output voltage is further trimmed down to -20% of the nominal, the same max output load applies. On the other hand, increasing the output voltage to +20% of the nominal should decrease output load accordingly to meet 600W output power.

Rev. 07.13.23\_#3.8

Note 3 - The maximum continuous average output power from this power supply will be 600W or 610W if the optional standby is available.



### **Absolute Maximum Ratings**

Stress in excess of those listed in the "Absolute Maximum Ratings" may cause permanent damage to the power supply. These are stress ratings only and functional operation of the unit is not implied at these or any other conditions above those given in the operational sections of this TRN. Exposure to any absolute maximum rated condition for extended periods may adversely affect the power supply's reliability.

| Table 1. Absolute Maximum Ratings  |  |                    |             |             |                     |                   |
|--|--|--------------------|-------------|-------------|---------------------|-------------------|
| Parameter  | Model                                  | Symbol             | Min         | Тур         | Max                 | Unit              |
| Input Voltage AC continuous operation  | All models                             | V <sub>IN,AC</sub> | 85          | -           | 264                 | Vac               |
| Maximum Output Power, continuous   | All models                             | P <sub>O,max</sub> | -           | -           | 600                 | W                 |
| Isolation Voltage (Qualification) Input to outputs(2xMOPP) Input to safety ground(1XMOPP) Outputs to safety ground(1XMOPP) | All models<br>All models<br>All models |                    | -<br>-<br>- | -<br>-<br>- | 4000<br>2500<br>500 | Vac<br>Vac<br>Vdc |
| Isolation Voltage (Production) Input to outputs(2xMOPP) Input to safety ground(1xMOPP) Outputs to safety ground(1xMOPP)    | All models<br>All models<br>All models |                    | -           | -           | 1800<br>1800<br>200 | Vac<br>Vdc<br>Vdc |
| Ambient Operating Temperature  | All models                             | T <sub>A</sub>     | -40         | -           | +70 <sup>1</sup>    | °C                |
| Storage Temperature  | All models                             | T <sub>STG</sub>   | -40         | -           | +85                 | °C                |
| Humidity (non-condensing)  Operating Non-operating   | All models<br>All models               |                    | 20<br>10    |             | 90<br>95            | %<br>%            |
| Altitude Operating Non-operating   | All models<br>All models               |                    | -           | -           | 16404.2<br>30000    | feet<br>feet      |

Note 1 - Line derating each output at 2.5% per degree C from  $50^{\circ}$ C to  $70^{\circ}$ C (see page 33 power derating curve)



## **Input Specifications**

| Parameter  | Condition  | Symbol                   | Min | Тур      | Max      | Unit            |
|--|--|--------------------------|-----|----------|----------|-----------------|
| Operating Input Voltage, AC  | All  | V <sub>IN,AC</sub>       | 85  | 115/230  | 264      | Vac             |
| Input AC Frequency   | All  | f <sub>IN</sub>          | 47  | 50/60    | 440      | Hz              |
| Maximum Steady State Input Current   | V <sub>IN,AC</sub> = 100Vac  | I <sub>IN,max</sub>      | -   | -        | 8        | А               |
| Standby Input Current $(V_O = Off, I_{SB} = 0A)$                               | All  |                          |     |          | 250      | mA              |
| No Load Input Current $(V_O = On, I_O = OA, I_{SB} = OA)$                      | All  | I <sub>IN,no-load</sub>  | -   | -        | 350      | mA              |
| Harmonic Line Currents   | All  | THD                      |     | Per EN61 | L000-3-2 |                 |
| Power Factor   | $I_{O} = I_{O,max}$<br>$V_{IN,AC} = 85 \text{ to } 264 \text{Vac}$ | PF                       | -   | 0.99     | -        | -               |
| Startup Surge Current (Inrush) @ 25°C  | V <sub>IN,AC</sub> = 264Vac  | I <sub>IN,surge</sub>    | -   | -        | 25       | A <sub>PK</sub> |
| Input Fuse   | Internal, L and N<br>250Vac rated                                  |                          | -   | -        | 10       | А               |
| Input AC Low Line Start-up Voltage   | $I_{O} = I_{O,max}$  | V <sub>IN,AC-start</sub> | 70  | -        | 80       | Vac             |
| Input AC Undervoltage Lockout Voltage  | $I_{O} = I_{O,max}$  | V <sub>IN,AC-stop</sub>  | 50  | -        | 65       | Vac             |
| Standby Input Power (V <sub>O</sub> Off, I <sub>SB</sub> = 0A)                 | All  |                          | -   | -        | 15       | W               |
| No Load Input Power<br>(I <sub>O</sub> = 0)                                    | All  | P <sub>IN,no-load</sub>  | -   | -        | 30       | W               |
| PFC Switching Frequency  | All  | f <sub>SW,PFC</sub>      | 60  | -        | 70       | KHz             |
| Ripple Switching Frequency   | LCM600N<br>LCM600Q<br>LCM600U<br>LCM600W                           | f <sub>SW,DC-DC</sub>    | 140 | -        | 150      | KHz             |
|  | LCM600L  | f <sub>SW,DC-DC</sub>    | 150 | -        | 160      | KHz             |
| Efficiency<br>(TA = 25°C, forced air cooling and include the<br>o-ring losses) | $V_{IN,AC} = 230Vac$ $I_{O} = I_{O,max}$                           | η                        | -   | 89       | -        | %               |
| Hold Up Time   | $V_{IN,AC} = 100Vac$ $P_O = P_{O,max}$ $T_A = 25  ^{\circ}C$       | t <sub>Hold-Up</sub>     | 20  | -        | -        | mSec            |
| Turn On Delay<br>Resistive Load  | $V_{IN,AC} = 85Vac$ $I_O = I_{O,max}$                              | t <sub>Turn-On</sub>     | -   | -        | 3        | Sec             |
| Leakage Current to safety ground   | UL test method   | I <sub>IN,leakage</sub>  | -   | -        | 0.3      | mA              |
| Leakage Current to Salety ground   | IEC test method  | I <sub>IN,leakage</sub>  | _   | -        | 0.5      | mA              |



## **Output Specifications**

| Table 3. Output Specification    |         | Condition   | Cumple of          | Min    | Time | Max    | I India         |
|----------------------------------|---------|---|--------------------|--------|------|--------|-----------------|
| Parameter                        |         | Condition   | Symbol             | Min    | Тур  | Max    | Unit            |
|                                  | LCM600L |   |                    | 11.94  | 12.0 | 12.06  |                 |
|                                  | LCM600N |   |                    | 14.925 | 15.0 | 15.075 |                 |
| Factory Set Voltage              | LCM600Q | I <sub>O</sub> = 0A   | $V_{O,factory}$    | 23.88  | 24.0 | 24.12  | Vdc             |
|                                  | LCM600U |   |                    | 35.82  | 36.0 | 36.18  |                 |
|                                  | LCM600W |   |                    | 47.76  | 48.0 | 48.24  |                 |
|                                  | LCM600L |   |                    | 9.6    | -    | 14.4   |                 |
|                                  | LCM600N |   |                    | 12     | -    | 19.5   |                 |
| Output Adjust Range              | LCM600Q | I <sub>O</sub> = 0A<br>See note 1                               | Vo                 | 19.2   | -    | 28.8   | Vdc             |
|                                  | LCM600U |   |                    | 28.8   | -    | 43.2   |                 |
|                                  | LCM600W |   |                    | 38.4   | -    | 57.6   |                 |
| Standby Output Adjust Range      |         |   | V <sub>SB</sub>    | 4.8    | 5    | 5.4    | Vdc             |
| Total Regulation                 |         | Inclusive of line, load<br>temperature change,<br>warm-up drift | Vo                 | -2.0   | -    | +2.0   | %V <sub>o</sub> |
|                                  | LCM600L |   |                    | -      | -    | 120    |                 |
|                                  | LCM600N |   |                    | -      | -    | 150    |                 |
| Output Ripple, pk-pk             | LCM600Q | See note 2  | Vo                 | -      | -    | 240    | mV              |
|                                  | LCM600U |   |                    | -      | -    | 360    |                 |
|                                  | LCM600W |   |                    | -      | -    | 480    |                 |
| Standby Output Ripple, pk-pk     |         |   | $V_{SB}$           | -      | -    | 100    | mV              |
|                                  | LCM600L |   |                    |        |      | 54     |                 |
|                                  | LCM600N |   |                    |        |      | 44     |                 |
| Output Current, continuous       | LCM600Q |   | I <sub>O,max</sub> | 0      | -    | 27     | А               |
|                                  | LCM600U | See note 3 and 4  |                    |        |      | 16.7   |                 |
|                                  | LCM600W |   |                    |        |      | 14     |                 |
| Maximum Output Power, continuous |         |   | P <sub>O,max</sub> | -      | -    | 600    | W               |
| Standby Output Current           |         |   | I <sub>SB</sub>    | 0      | _    | 2      | А               |



### **Output Specifications**

| Table 3. Output Specifications    |   |                  |     |     |      |                       |
|-----------------------------------|---|------------------|-----|-----|------|-----------------------|
| Parameter                         | Condition   | Symbol           | Min | Тур | Max  | Unit                  |
| Dynamic Response - Peak Deviation | 50% to 100% of $I_{O,max}$<br>Slew rate = 1A/ $\mu$ s<br>See note 5         | ±%V <sub>0</sub> | -   | -   | 2    | %                     |
| Turn On Overshoot                 | I <sub>O</sub> = 0  | %V <sub>O</sub>  | -   | -   | 10   | %                     |
| Overload Protection               | Bouncing mode   | Io               | 105 |     | 125  | %I <sub>O,max</sub>   |
| Standby Overload Protection       |   | I <sub>SB</sub>  | 120 | -   | 170  | %I <sub>SB</sub> ,max |
| Over Voltage Protection           |   | Vo               | 125 | -   | 145  | %Vo                   |
| Standby Output Voltage Protection |   | V <sub>SB</sub>  | 110 | -   | 125  | %V <sub>SB</sub>      |
| Load Capacitance                  | Startup   |                  | 0   | -   | 4700 | μF                    |
| Standby Max Capacitive Load       |   |                  | 0   | -   | 270  | μF                    |
| Over Temperature Protection       | r Temperature Protection Auto Recovery 10°C to 15°C above safe operating ar |                  |     | rea |      |                       |

Note 1 - See page 20 for voltage adjustment pot location.

Rev. 07.13.23\_#3.8



Note 2 - See page 20 for Voltage adjustment pot location.

Note 2 - Measure with a 0.1mF ceramic capacitor in parallel with a 10mF tantalum capacitor using a 20MHz bandwidth limited oscilloscope.

Note 3 - Standard operating orientation is front side facing forward.

Note 4 - Operation up to 50% load permissible with sideways (horizontal) or front side up (top) mounting orientation.


Note 5 - Tested with minimum output capacitor of 470μF on main output and 270μF on 5V standby. For LCM600L/N series, main output is tested with 4700μF output capacitor with a minimum loading of 10% with respect to its maximum load.

## **System Timing Specifications**

| Table 4. Ti | Table 4. Timing Specifications   |     |     |      |      |  |  |
|-------------|--|-----|-----|------|------|--|--|
| Label       | Parameter  | Min | Тур | Max  | Unit |  |  |
| T1          | Delay from AC being applied to main output voltages being within regulation.   | -   | -   | 3000 | mSec |  |  |
| T2          | Delay from AC being applied to ACOK signal assertion (going low).  | 200 | -   | 1500 | mSec |  |  |
| ТЗ          | Delay from main output within regulation to DCOK signal assertion (going low).   | -   | -   | 500  | mSec |  |  |
| T4          | Hold up time - Delay from AC loss to main output within regulation.<br>Main output set at nominal voltage setting.                           | 20  | -   | -    | mSec |  |  |
| T5          | Delay from AC loss to ACOK signal de-assertion (going high).   | 5   | -   | 12   | mSec |  |  |
| T6          | Delay from DCOK signal de-assertion (going high) to main output dropping to less than the lower trimming range (-20% of the nominal output). | 1   | -   | -    | mSec |  |  |
| T7          | Delay from INH_EN going high to main output being within regulation (90% Vo of the nominal voltage).   | -   | -   | 2000 | mSec |  |  |
| Т8          | Delay from INH_EN going high to DCOK signal going high.  | -   | -   | 2    | mSec |  |  |





## **System Timing Diagram**

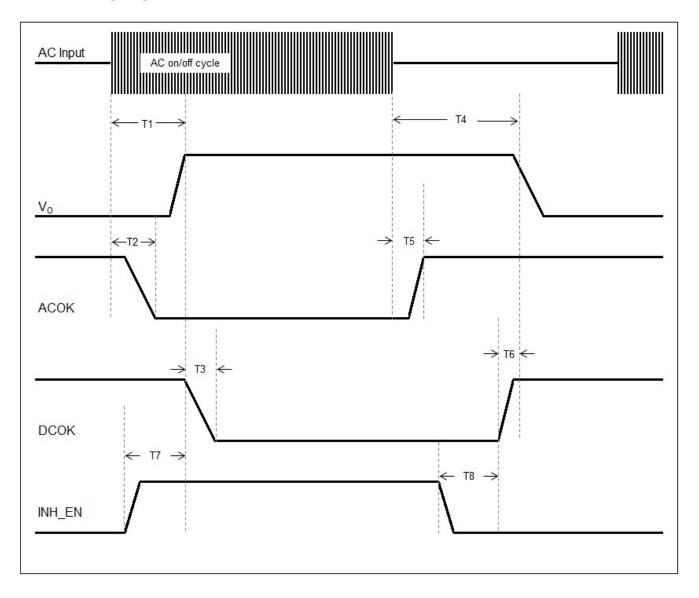






#### **LCM600L Performance Curves**

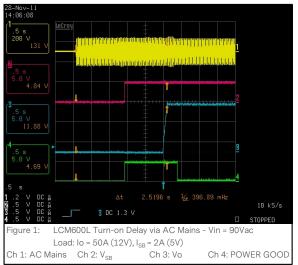


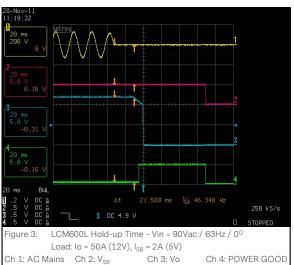

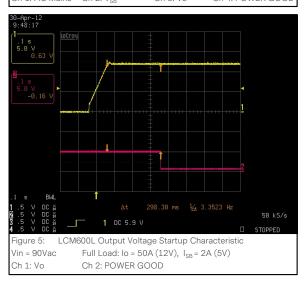

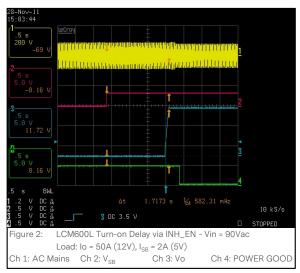


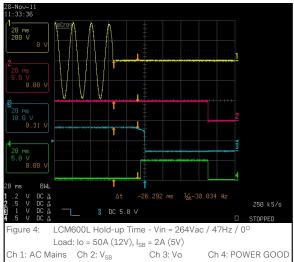


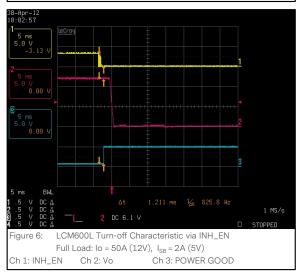






#### **LCM600L Performance Curves**

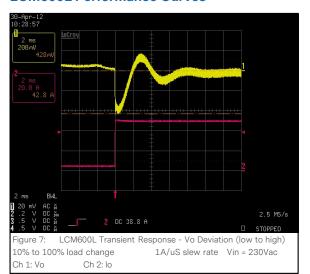


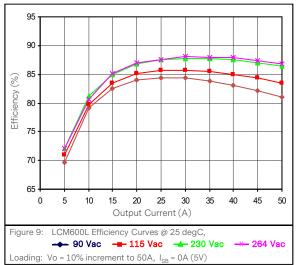

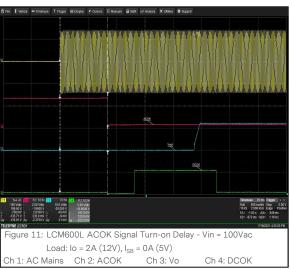

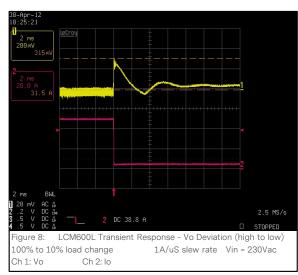

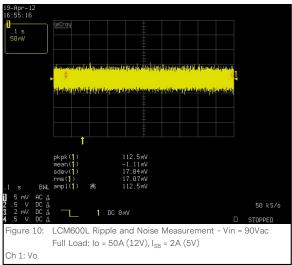

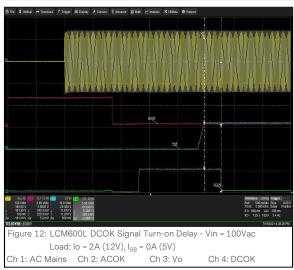



10




Rev. 07.13.23\_#3.8 advancedenergy.com

#### **LCM600L Performance Curves**

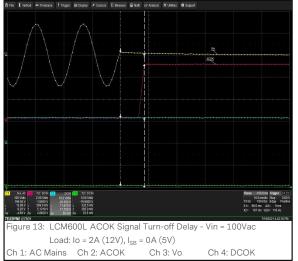


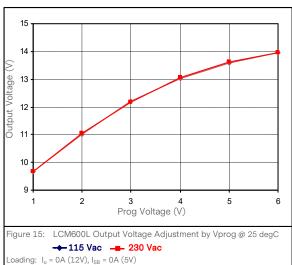


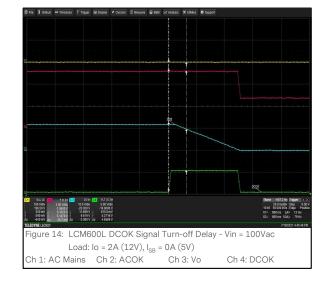






#### **LCM600N Performance Curves**

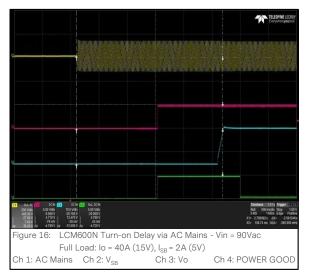

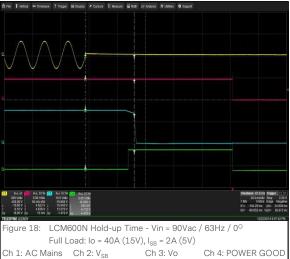

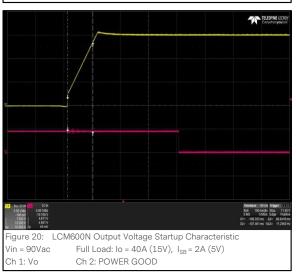

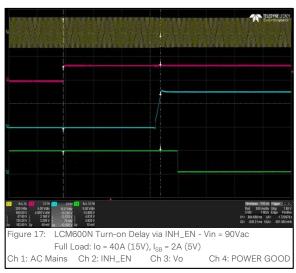

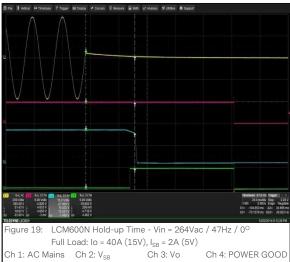



12



Rev. 07.13.23\_#3.8 advancedenergy.com

#### **LCM600N Performance Curves**





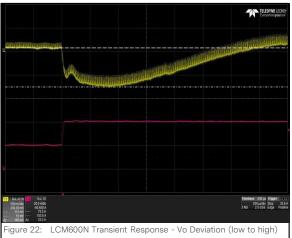



Figure 22: LCM600N Transient Response - Vo Deviation (low to high) 10% to 100% load change 1A/uS slew rate Vin = 230Vac Ch 1: Vo Ch 2: lo

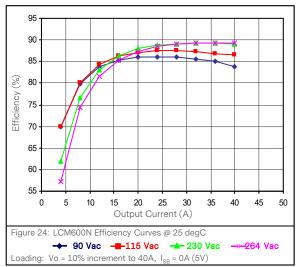

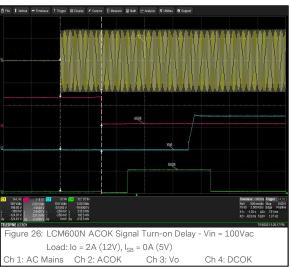

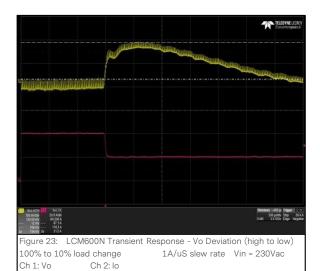

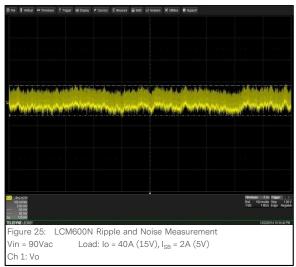

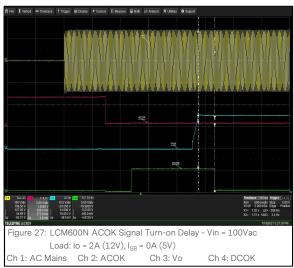



13




Rev. 07.13.23\_#3.8 advancedenergy.com

#### **LCM600N Performance Curves**

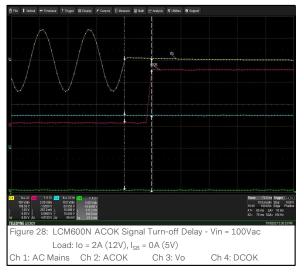


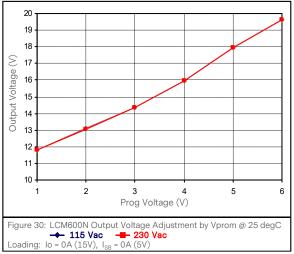


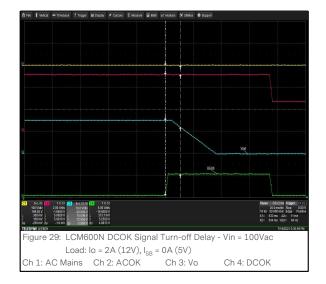






#### **LCM600Q Performance Curves**

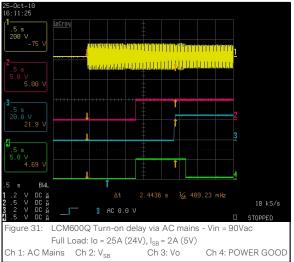


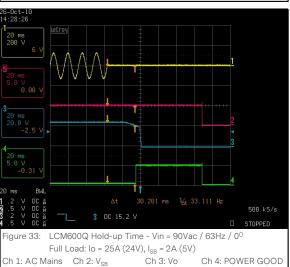

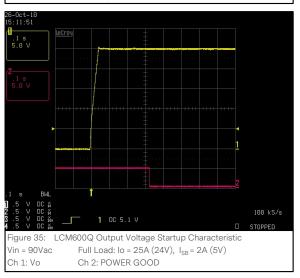

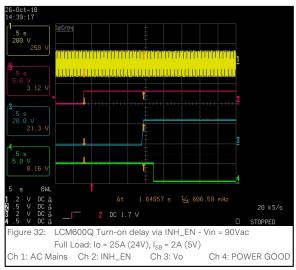

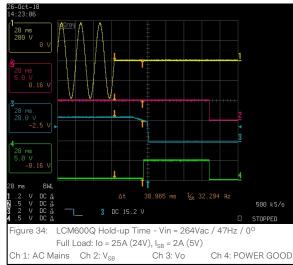

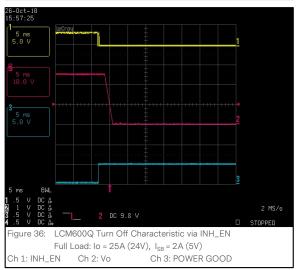


15





Rev. 07.13.23\_#3.8 advancedenergy.com


#### **LCM600Q Performance Curves**

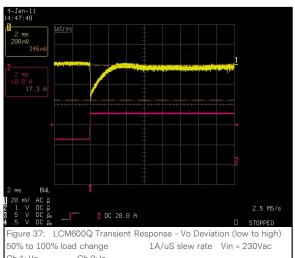



Ch 1: Vo

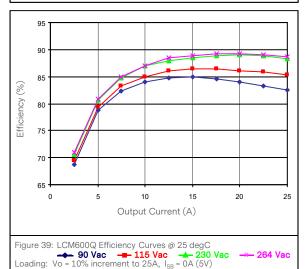

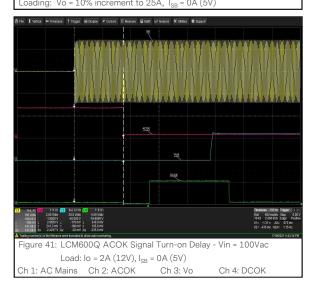

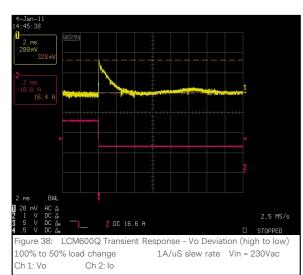

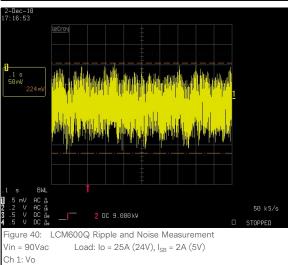

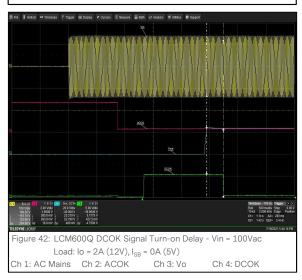



16




advancedenergy.com Rev. 07.13.23\_#3.8

### **LCM600Q Performance Curves**

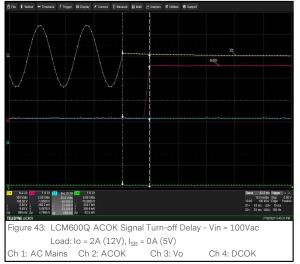

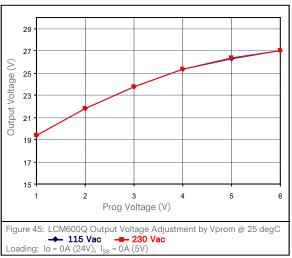

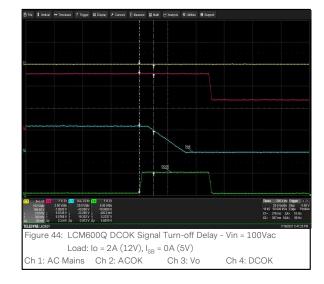






#### **LCM600U Performance Curves**






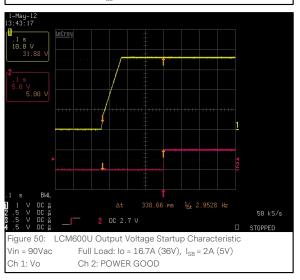

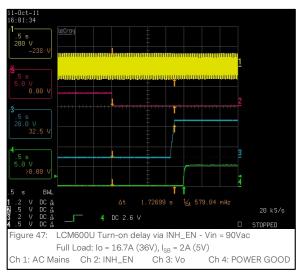

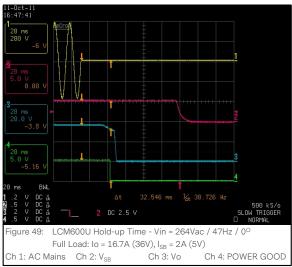

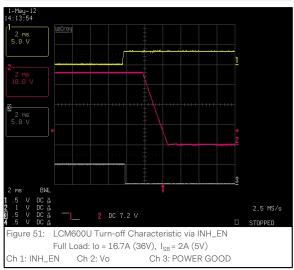



Rev. 07.13.23\_#3.8 advancedenergy.com

#### **LCM600U Performance Curves**





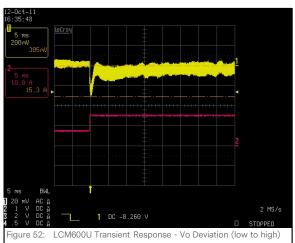


Figure 52: LCM600U Transient Response - Vo Deviation (low to high) 50% to 100% load change 1A/uS slew rate Vin = 230Vac Ch 1: Vo Ch 2: lo

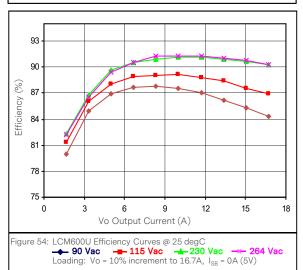

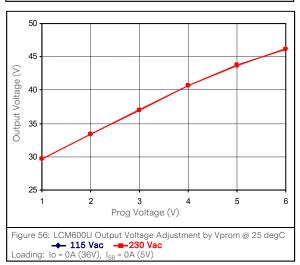

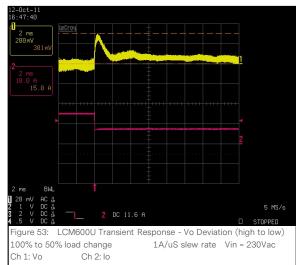


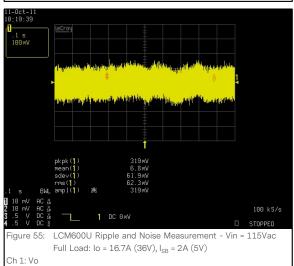





#### **LCM600W Performance Curves**




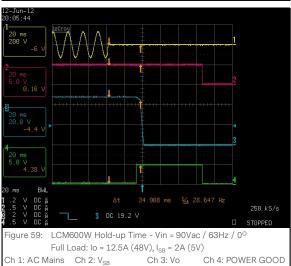

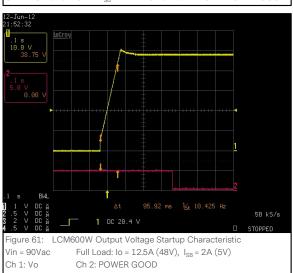



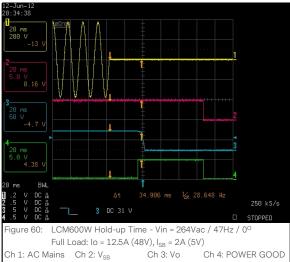


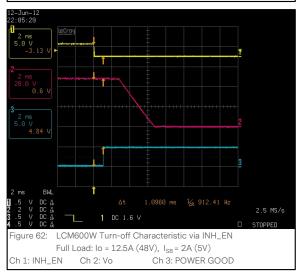





Rev. 07.13.23\_#3.8 advancedenergy.com


#### **LCM600W Performance Curves**

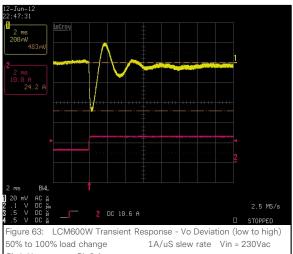


Ch 1: Vo

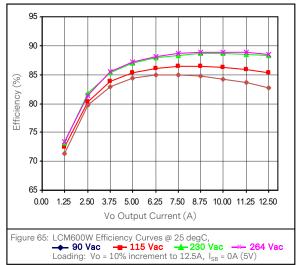

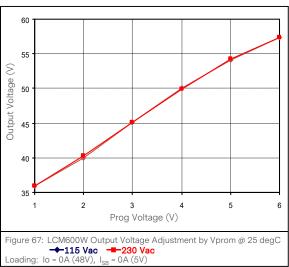

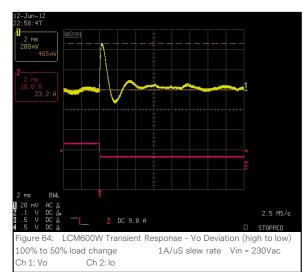

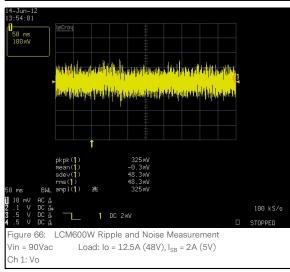

21

#### **Protection Function Specifications**

#### **Input Fuse**

LCM600 series are equipped with an internal non user serviceable 10A High Rupturing Capacity (HRC) 250Vac fuse to IEC 127 for fault protection in both L1 and L2 lines input.

#### Over Voltage Protection (OVP)

The power supply latches off during output overvoltage with the AC line recycled to reset the latch.

| Parameter                           | Min  | Тур | Max   | Unit |
|-------------------------------------|------|-----|-------|------|
| LCM600L Overvoltage                 | 15.0 | /   | 17.4  | V    |
| LCM600N Overvoltage                 | 21.2 | /   | 21.75 | V    |
| LCM600Q Overvoltage                 | 30.0 | /   | 34.8  | V    |
| LCM600U Overvoltage                 | 45.0 | /   | 52.2  | V    |
| LCM600W Overvoltage                 | 60.0 | /   | 69.6  | V    |
| V <sub>SB</sub> Standby Overvoltage | 7.0  | /   | 7.5   | V    |

#### **Over Current Protection (OCP)**

LCM600 series output will be in bouncing mode with a recovery time delay of 20 sec (for LCM600Q/U/W series) or 30 sec (for LCM600L/N series) when the output current hits the OCP limit provided.

| Parameter                           | Min | Тур | Max | Unit                  |
|-------------------------------------|-----|-----|-----|-----------------------|
| V <sub>O</sub> Output Overcurrent   | 105 | /   | 125 | %lo,max               |
| V <sub>SB</sub> Standby Overcurrent | 120 | /   | 170 | %l <sub>SB</sub> ,max |

### **Short Circuit Protection (SCP)**


A short circuit is defined as less than 0.03 ohm resistance between the output terminals. All outputs will be protected against short circuit to ground or other outputs. No damage will result. In the event of short circuit PSU output will be in bouncing mode with a recovery delay of 20 Sec. Optional 5V standby, independent of the main output, will also be in bouncing mode once the fault occurred.


#### **Over Temperature Protection (OTP)**


The power supply will be internally protected against over temperature conditions. When the OTP circuit is activated, the power supply will shut off and will auto-recover once the OTP condition is gone. The OTP will not be triggered when PSU is running at any given operating ambient and load.



### Mechanical Outlines (unit: mm)

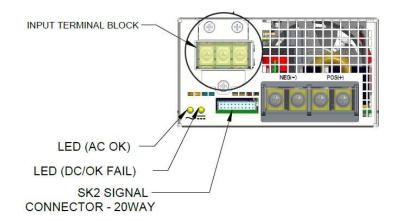

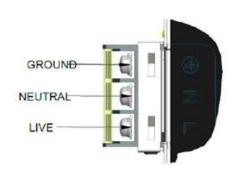

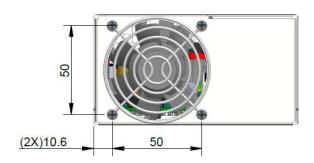






**IEC** AC INLET VERSION



### Mechanical Outlines (unit: mm)

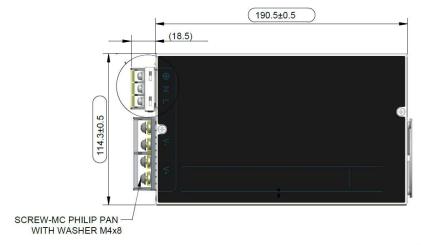


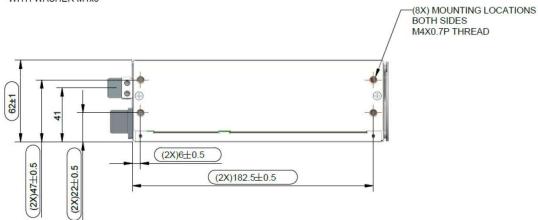

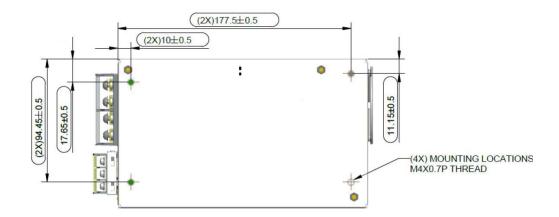



## Mechanical Outlines - Voltage Adjustment Pot Location

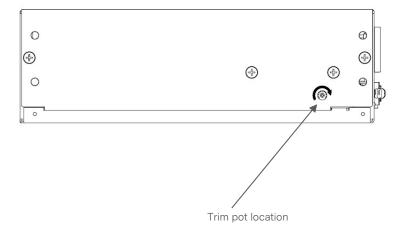



#### **Connector Definitions**

AC Input Connector - SK1

Pin1 - Live

Pin2 - Neutral

Pin3 - Ground

Output Connector - SK4&SK5

SK4(&SK3) - + Main Output (Vo)

SK5(&SK6) - Main Output Return

Output Connector - SK2

Pin 1 - A2 (Not used)

Pin 2 - -VPROG

Pin 3 - A1 (Not used)

Pin 4 - - Vsense

Pin 5 - ISHARE

Pin 6 - A0

Pin 7 - SDA1

Pin 8 - +VPROG

Pin 9 - SCL1

Pin 10 - +Vsense

Pin 11 - 5VSB

Pin 12 - GND

Pin 13 - 5VSB

Pin 14 - G\_DCOK\_C

Pin 15 - GPIOA6


Pin 16 - G\_DCOK\_E

Pin 17 - GND

Pin 18 - G\_ACOK\_C

Pin 19 - INH\_EN

Pin 20 - G\_ACOK\_E

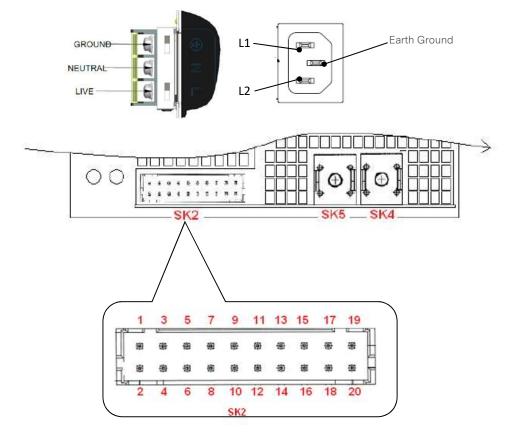




## **Power / Signal Mating Connectors and Pin Types**


| Table 4. Mating Connectors for LCM600 Series |  |  |  |  |  |
|--|--|--|--|--|--|
| Reference                                    | On Power Supply                          | Mating Connector or Equivalent   |  |  |  |
| AC Input Connector                           | IEC320-C13<br>DINKLE (PN: DT-4C-B14W-03) | IEC320-C14<br>M3.5 Screw   |  |  |  |
| SK2  | HDR-DR 20WAY CI0120P1HD0-LF              | LANDWIN (LWE PN: 2050S) Housing (LWE PN: 2053T) Contact CVILUX (CX PN: Cl0120SD000) Housing (CX PN: Cl01TD21PE0) Contact |  |  |  |
| SK3, SK4, SK5, SK6                           | 500-006274-0001                          | Spade Terminal - Molex: BB-124-08<br>(19141-0058)  |  |  |  |

#### Accessories for SK2:

1. Order kit part number 73-788-001 for control connector interface with .3m wires attached

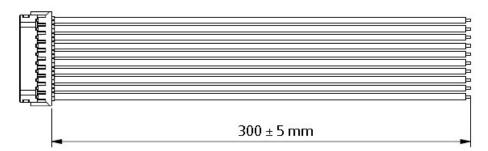


2. Order kit part number 73-788-002 for control connector interface with unloaded housing and 20 pins





### **LED Indicator Definitions**

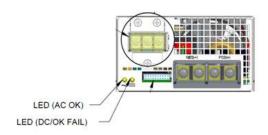

Two user-friendly LEDs for status and diagnostics show status of input power, output power and alarm condition valuable troubleshooting aid to reduce system downtime.

| Conditions                   | LED Status |               |  |  |
|------------------------------|------------|---------------|--|--|
| Conditions                   | ACOK LED   | DCOK/FAIL LED |  |  |
| AC present / Output On       | Green      | Green         |  |  |
| No AC power to PSU           | OFF        | OFF           |  |  |
| Standby mode/main output off | Green      | OFF           |  |  |
| Power supply failure         | Green      | OFF           |  |  |



## Weight

The LCM600 series weight is 2.84lbs (1kg=2.2046lbs) maximum.



## **EMC Immunity**

The LCM600 series are designed to meet the following EMC immunity specifications

| Table 5. Environmental Specifications |   |
|---------------------------------------|---|
| Document                              | Description   |
| EN55032                               | Conducted and Radiated EMI Limits   |
| EN6100-3-2 Harmonics                  | Harmonics   |
| EN61000-3-3                           | Voltage Fluctuations  |
| IEC/EN 61000-4-2                      | Electromagnetic Compatibility (EMC) - Testing and measurement techniques - Electrostatic discharge immunity test. +/-8KV air, +/-15KV contact discharge, Level 3  |
| IEC/EN 61000-4-3                      | Electromagnetic Compatibility (EMC) - Testing and measurement techniques, Radiated, radio-frequency, electromagnetic field immunity test. 80 – 600 MHz,10V/m, AM 80% (1KHz),900MHz, Level 3                             |
| IEC/EN 61000-4-4                      | Electromagnetic Compatibility (EMC) - Testing and measurement techniques, Electrical Fast Transient/Burst Immunity Test. 2KV for AC power port, 1.0KV for DC ports, I/O and signal ports, Level 3                       |
| IEC/EN 61000-4-5                      | Electromagnetic Compatibility (EMC) - Testing and measurement techniques – 2KV common mode and 1KV differential mode for AC ports and 0.5kV differential mode for DC power, I/O and signal ports, Level 3.              |
| IEC/EN 61000-4-8                      | Power Freq Magnetic, Level 3  |
| IEC/EN 61000-4-11                     | Electromagnetic Compatibility (EMC) - Testing and measurement techniques: Voltage Dips and Interruptions: 30% reduction for 500mS- Criteria B>95% reduction for 10mS, Criteria A, >95% reduction for 5000mS, Criteria C |
| EN55024:1998                          | Information Technology Equipment-Immunity Characteristics, Limits and Method of Measurements  |
| EN61000-4-6                           | Conducted RFI for LCM600Q-T-409 only  |
| EN61000-6-2                           | For LCM600Q-T-409 only  |



### **Safety Certifications**

The LCM600 series are intended for inclusion in other equipment and the installer must ensure that it is in compliance with all the requirements of the end application. This product is only for inclusion by professional installers within other equipment and must not be operated as a stand alone product.

| Table 6. Safety Certifications for LCM600 Series Power Supply System |                          |   |  |  |
|--|--------------------------|---|--|--|
| Standard   | File#                    | Description                               |  |  |
| UL/CSA62368-1  | E186249-A6047-UL-<br>X10 | US and Canada Requirements                |  |  |
| EN62368-1  | B 013890 3170 Rev. 00    | European Requirements                     |  |  |
| IEC60950-1<br>IEC60601-1   |                          | International Electrotechnical Commission |  |  |
| ES60601-1/CSA C22.2 No. 60601-1                                      | E182560-V4-S2            | US and Canada Requirements                |  |  |
| EN60601-1  |                          | European Requirements                     |  |  |
| ccc  | 2012010907546604         | China Requirements                        |  |  |
| UKCA Mark  |                          | UK Requirements                           |  |  |




#### **EMI Emissions**

The LCM600 series has been designed to comply with the Class B limits of EMI requirements of EN55032 (FCC Part 15) and CISPR 22 (EN55032) for emissions and relevant sections of EN61000 (IEC61000) for immunity.

The unit is enclosed inside a metal box, tested at 600W using resistive load with cooling fan.

#### **Conducted Emissions**

The applicable standard for conducted emissions is EN55032 (FCC Part 15). Conducted noise can appear as both differential mode and common mode noise currents. Differential mode noise is measured between the two input lines, with the major components occurring at the supply fundamental switching frequency and its harmonics. Common mode noise, a contributor to both radiated emissions and input conducted emissions, is measured between the input lines and system ground and can be broadband in nature.

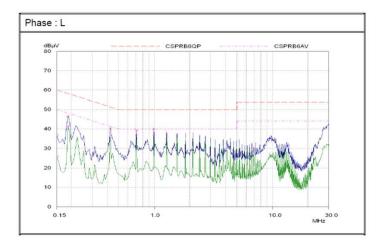

The LCM600 series power supplies have internal EMI ensure the convertors' conducted EMI levels comply with EN55032 (FCC Part 15) Class B and EN55032 (CISPR22) Class B limits. The EMI measurements are performed with resistive loads at maximum rated loading.

Sample of EN55032 Conducted EMI Measurement at 100Vac input

Note: Red Line refers to Artesyn Quasi Peak margin, which is 6dB below the CISPR international limit. Pink Line refers to the Emerson Average margin which is 6dB below the CISPR international limit.

| Table 7. Conducted EMI emission specifications of the LCM600 series |       |        |     |     |     |      |
|---|-------|--------|-----|-----|-----|------|
| Parameter   | Model | Symbol | Min | Тур | Max | Unit |
| FCC Part 15, class B  | All   | Margin | -   | -   | 6   | dB   |
| CISPR 22 (EN55032) class B  | All   | Margin | -   | -   | 6   | dB   |

#### **Radiated Emissions**


Unlike conducted EMI, radiated EMI performance in a system environment may differ drastically from that in a stand-alone power supply. The shielding effect provided by the system enclosure may bring the EMI level from Class A to Class B. It is thus recommended that radiated EMI be evaluated in a system environment. The applicable standard is EN55032 Class A (FCC Part 15). Testing ac-dc convertors as a stand-alone component to the exact requirements of EN55032 can be difficult, because the standard calls for 1m leads to be attached to the input and outputs and aligned such as to maximize the disturbance. In such a set-up, it is possible to form a perfect dipole antenna that very few ac-dc convertors could pass. However, the standard also states that 'an attempt should be made to maximize the disturbance consistent with the typical application by varying the configuration of the test sample.



#### **Operating Temperature**

The LCM600 series maximum output power (600W) can be loaded up to an ambient temperature of  $+50^{\circ}$ C. Only 50% (300W) of the maximum output power can be loaded at ambient temp of  $+70^{\circ}$ C. Linear derating to 50% nominal output power starts from  $+50^{\circ}$ C. The elapsed time between the application of input power and the attainment steady state values requires 5 minutes warm up for  $-20^{\circ}$ C to  $-40^{\circ}$ C operation.

#### **Output Power vs Operating Temperature**

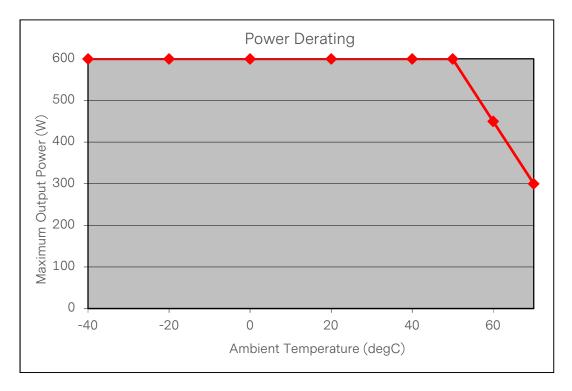

#### **Forced Air Cooling**

The LCM600 series power supply includes internal cooling fans as part of the power supply assembly to provide forced aircooling to maintain and control temperature of devices and ambient temperature in the power supply to appropriate levels. The standard direction of airflow is from the fan side to the DC output side of the power supply.

The cooling fan is a variable speed fan. Fan will be smart based on internal temperature. Fan noise <45 dBA with 80% load @ 30°C.



#### **Storage and Shipping Temperature**

The LCM600 series power supply can be stored or shipped at temperatures between -40 $^{\circ}$ C to +85 $^{\circ}$ C and relative humidity from 10% to 95% non-condensing.

#### **Altitude**

The LCM600 series power supply will operate within specifications at altitudes up to 16404.2 feet above sea level. The power supply will not be damaged when stored at altitudes of up to 30000 feet above sea level.

### **Humidity**

The LCM600 series power supply will operate within specifications when subjected to a relative humidity from 20% to 90% non-condensing. The LCM600 can be stored in a relative humidity from 10% to 95% non-condensing.

#### **Vibration**

The LCM600 series will pass the following vibration specifications:

#### Non-Operating Random Vibration

| Acceleration    | 2.7                           | gRMS           |             |  |
|-----------------|-------------------------------|----------------|-------------|--|
| Frequency Range | 10 - 2000                     |                | Hz          |  |
| Duration        | 20                            |                | Mins        |  |
| Direction       | 3 mutually perpendicular axis |                |             |  |
| PSD Profile     | FREQ (Hz)                     | SLOPE (dB/oct) | PSD (g²/Hz) |  |
|                 | 10-190                        | /              | 0.01        |  |
|                 | 190-210                       | -31.213        | /           |  |
|                 | 210-2000                      | /              | 0.003       |  |

#### Operating Random Vibration

| Acceleration    | 1.0                           | gRMS           |             |  |
|-----------------|-------------------------------|----------------|-------------|--|
| Frequency Range | 10 - 500                      |                | Hz          |  |
| Duration        | 20                            |                | Mins        |  |
| Direction       | 3 mutually perpendicular axis |                |             |  |
| PSD Profile     | FREQ (Hz)                     | SLOPE (db/oct) | PSD (g²/Hz) |  |
|                 | 10-500                        | /              | 0.002       |  |



34

### Shock

The LCM600 series power supply will pass the following shock specifications:

Non-Operating Half-Sine Shock

| Acceleration    | 30                         | G    |  |
|-----------------|----------------------------|------|--|
| Duration        | 18                         | mSec |  |
| Pulse           | Half-Sine                  |      |  |
| Number of Shock | 3 shock on each of 6 faces |      |  |

### Operating Half-Sine Shock

| Acceleration    | 4                           | G    |  |
|-----------------|-----------------------------|------|--|
| Duration        | 22                          | mSec |  |
| Pulse           | Half-Sine                   |      |  |
| Number of Shock | 3 shocks in each of 6 faces |      |  |



## POWER AND CONTROL SIGNAL DESCRIPTIONS

#### **AC Input Connector**

This connector supplies the AC Mains to the LCM600 series power supply.

Pin 1 – L1

Pin 2 - L2

Pin 3 - Earth Ground

#### **Output Connectors - SK4&SK5**

These pins provide the main output for the LCM600 series. The + Main Output  $(V_O)$  and the Main Output Return pins are the positive and negative rails, respectively, of the  $V_O$  main output of the LCM600 power supply. The Main Output  $(V_O)$  is electrically isolated from the power supply chassis.

SK3&SK4 - + Main Output (Vo) SK5&SK6 - Main Output Return

#### **Control Signals - SK2**


The LCM600 series SK2 contains 20 pins control signal header providing analogy control interface, standby power and I<sup>2</sup>C interface.

#### A0, A1, A2 - (Pin 6, Pin 3, Pin 1)

Please refer to "Communication Bus Descriptions" section.

#### -VPROG, +VPROG - (Pin 2, Pin 8)

Positive and return connection of external supply for Margin Programming. The Power supplies will have a "margin" pin which will accept a 1-6VDC signal referenced to a floating return that will program the output the entire adjustment range. The 1-6VDC signal will be limited to 10mA sinking current.

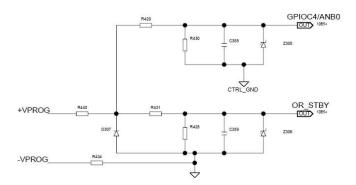

#### -Vsense, +Vsense - (Pin 4, Pin 10)

This remote sense circuit will be designed to compensate for a power path drop around the entire loop of 0.5 volt. These pins should be connected as close to the loading as possible, If left open, the power supply will regulate the voltage at its output terminals but the voltage level at the load may go lower than the guaranteed spec.



### POWER AND CONTROL SIGNAL DESCRIPTIONS

#### ISHARE - (Pin 5)

The main output will have active load sharing. The output will share within 10% at full load. All current sharing functions are implemented internal to the power supply by making use of the ISHARE signal. The system connects the ISHARE lines between the power supplies. The supplies must be able to load share with up to 10 power supplies in parallel. The I2C Line should be connected separately when the number of units in parallel is more than 8.

#### SDA1, SCL1, GND - (Pin 7, Pin 9, Pin 17)


Please refer to "Communication Bus Descriptions" section.

#### 5VSB, GND - (Pin 11, Pin 12, Pin 13)

The LCM600 series power supply provides a regulated 5 volt 2 amp auxiliary output voltage to power critical circuitry that must remain active regardless of the on/off status of the power supply's main output. The standby voltage is available whenever a valid AC input voltage is applied to the unit.

#### G\_DCOK\_C, G\_DCOK\_E - (Pin 14, Pin 16)

G\_DCOK\_C is a power good signal and will be pulled LOW by the power supply to indicate that both the outputs are above the regulation limits of the power supply. When any output voltage falls below regulation limits or when AC power has been removed for a time sufficiently long so that power supply operation is no longer guaranteed, G\_DCOK\_C will be de-asserted to a HIGH state. Connect 4.7K resistor on G\_DCOK\_C to PSU's 5V stand-by.

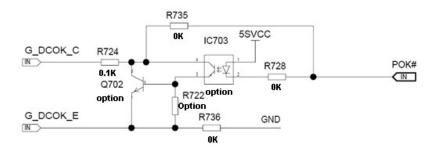


#### **GPIOA6 - (Pin 15)**

**EEPROM Write Protect** 

#### G\_ACOK\_C, G\_ACOK\_E - (Pin 18, Pin 20)

G-ACOK\_C signal is used to indicate presence of AC input to the power supply. A logic "Low" level on this signal will indicate AC input to the power supply is present. A Logic "High" on this signal will indicate a loss of AC input to the power supply. Connect 4.7K resistor on G\_ACOK\_C to external 5V power.

Rev. 07.13.23\_#3.8

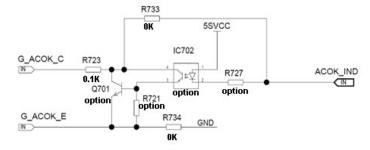



### POWER AND CONTROL SIGNAL DESCRIPTIONS

#### INH\_EN - (Pin 19)

This signal is required to remotely turn on/off the power supply. When INH\_EN is shorted to secondary common, the PSU main output shall turn OFF, otherwise the main output is ON.



Rev. 07.13.23\_#3.8 advancedenergy.com 38

#### I<sup>2</sup>C Bus Signals

The LCM600 series contains enhanced monitor and control functions implemented via the I<sup>2</sup>C bus. The LCM600 series I<sup>2</sup>C functionality (PMBus<sup>TM</sup> and FRU data) can be accessed via the output connector control signals. The communication bus is powered either by the internal 3.3V supply or from an external power source connected to the standby output (ie: accessing an unpowered power supply as long as the standby output of another power supply connected in parallel is on).

If units are connected in parallel or in redundant mode, the standby outputs must be connected together in the system. Otherwise, the I<sup>2</sup>C bus will not work properly when a unit is inserted into the system without the AC source connected.

Note: PMBus™ functionality can be accessed only when the PSU is powered-up. Guaranteed communication I<sup>2</sup>C speed is 100KHz.

#### SDA1, SCL1 (I<sup>2</sup>C Data and Clock Signals) - (pin7, pin 9)

I<sup>2</sup>C serial data and clock bus - these pins are internally pulled up to internal 3.3V supply with a 4.7K ohm resistor. These pins must be pulled-up in the system by an 2.2K ohm resistor to the 3.3V supply.

#### A0, A1, A2 (I2C Address BIT 0, BIT1, BIT2 Signals) - (pin6, pin3, pin1)

A1, A2 input pins not be used. The address line A0 to the power supply addresses for FRU data and PMBus<sup>TM</sup> data communication. This allows the system to assign different addresses for each power supply. During I<sup>2</sup>C communication between system and power supplies, the system will be the master and power supplies will be slave.

They are internally pulled up to internal 5V supply with 2K ohm resistors and voltage limited to 2.7V with zener diodes.

#### I<sup>2</sup>C Bus Communication Interval

The interval between two consecutive I<sup>2</sup>C communications to the power supply should be at least 50ms to ensure proper monitoring functionality.


#### I<sup>2</sup>C Bus Signal Integrity

The noise on the I<sup>2</sup>C bus (SDA, SCL lines) due to the power supply will be less than 500mV peak-to-peak. This noise measurement should be made with an oscilloscope bandwidth limited to 100MHz. Measurements should be make at the power supply output connector with 2.2K ohm resistors pulled up to StandBy Output and 100pf ceramic capacitors to StandBy Output Return.

The noise on the address lines A0 will be less than 100mV peak-to-peak. This noise measurement should be made at the power supply output connector.



### I<sup>2</sup>C Bus Internal Implementation, Pull-ups and Bus Capacitances

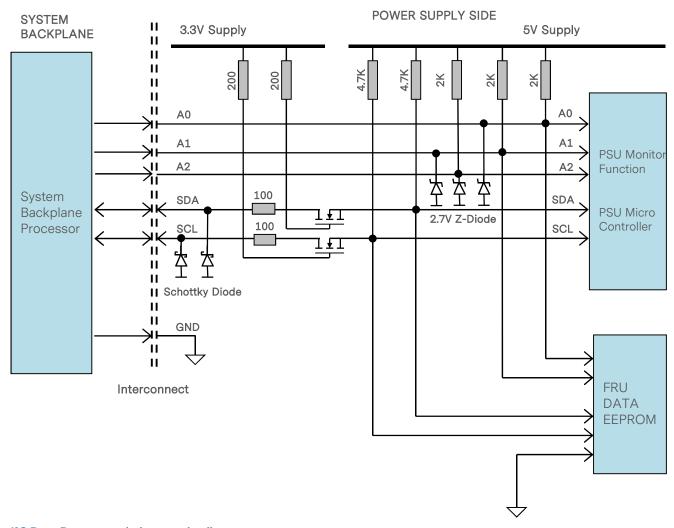

#### I<sup>2</sup>C Bus - Recommended external pull-ups

Electrical and interface specifications of I<sup>2</sup>C signals (referenced to standby output return pin, unless otherwise indicated):

| Parameter                             | Condition | Symbol           | Min | Туре | Max | Unit |
|---------------------------------------|-----------|------------------|-----|------|-----|------|
| SDA, SCL internal pull-up resistor    |           | R <sub>int</sub> | -   | 4.7  | -   | Kohm |
| SDA, SCL internal bus capacitance     |           | C <sub>int</sub> | -   | 0    | -   | pF   |
| Recommended external pull-up resistor | 1 PSU     | D                | -   | 2.2K | -   | ohm  |
| 1 PSU                                 | 2 PSU     | R <sub>ext</sub> | -   | 1.1K | -   | ohm  |




### **Logic Levels**

LCM600 series power supply I<sup>2</sup>C communication bus will respond to logic levels as per below:

Logic High: 5.1V nominal (Spec is 2.1V to 5.5V)\*\* Logic Low: 500mV nominal (Spec is 800mV max)\*\*

#### **Timings**

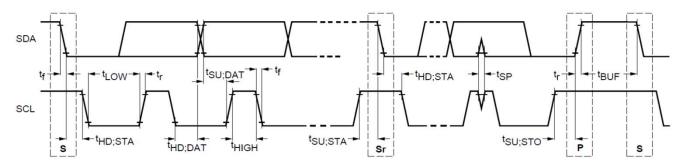

| Description                                      | Cymphol             | Standard-N | Mode Specs | A advis I B | Anna company | l lmit |
|--|---------------------|------------|------------|-------------|--------------|--------|
| Parameter  | Symbol              | Min        | Max        | Actual      | Measured     | Unit   |
| SCL clock frequency                              | f <sub>SCL</sub>    | 0          | 100        | (           | 95           | KHz    |
| Hold time (repeated) START condition             | t <sub>HD;STA</sub> | 4.0        | -          |             | l.6          | uS     |
| LOW period of SCL clock                          | t <sub>LOW</sub>    | 4.7        | -          |             | 1.7          | uS     |
| HIGH period of SCL clock                         | t <sub>HIGH</sub>   | 4.0        | -          | 4.2         |              | uS     |
| Setup time for repeated START condition          | t <sub>su;sta</sub> | 4.7        | -          | 4.7         |              | uS     |
| Data hold time                                   | t <sub>HD;DAT</sub> | 0          | 3.45       | (           | ).5          | uS     |
| Data setup time                                  | t <sub>su;dat</sub> | 250        | -          | 4(          | 000          | nS     |
| Rise time  | t <sub>r</sub>      | -          | 1000       | SCL = 890   | SDA = 915    | nS     |
| Fall time  | t <sub>f</sub>      | -          | 300        | SCL = 285   | SDA = 590    | nS     |
| Setup time for STOP condition                    | t <sub>su;sto</sub> | 4.0        | -          | 5.8         |              | uS     |
| Bus free time between a STOP and START condition | t <sub>BUF</sub>    | 4.7        | -          | 69          |              | uS     |

<sup>\*\*\*</sup> Note Philips  $^{\text{TM}}$   $^{\text{I}2}\text{C}$  adapter and bundled software (USB-to- $^{\text{I}2}\text{C}$ ) was used



<sup>\*\*</sup>Note:  $Philips^{TM} I^2C$  adapter was used.

### **Device Addressing**

The LCM600 series will respond to supported commands on the I2C bus that are addressed according to pin A0 of output connector.

Address pin are held HIGH by default via pull up to internal 5V supply with a 2K ohm resistor and voltage limited to 2.7V with zener diodes. To set the address as "0", the corresponding address line should be pulled down to logic ground level. Below tables show the address of the power supply with A0 pins set to either "0" or "1".

| PSU Slot | Slot ID Bits | PMBus™ Address    |  |  |  |
|----------|--------------|-------------------|--|--|--|
| F30 310t | A0           | PMBUS'''' Address |  |  |  |
| 1        | 0            | В0                |  |  |  |
| 2        | 1            | B2                |  |  |  |


<sup>\*</sup> Default PMBus<sup>TM</sup> address is B2.



#### I<sup>2</sup>C Synchronization

The LCM600 series power supply might apply clock stretching. An addressed slave power supply may hold the clock line (SCL) low after receiving (or sending) a byte, indicating that it is not yet ready to process more data. The system master that is communicating with the power supply will attempt to raise the clock to transfer the next bit, but must verify that the clock line was actually raised. If the power supply is clock stretching, the clock line will still be low (because the connections are open-drain).

The maximum time out condition for clock stretching for LCM600 series is 100 milliseconds.

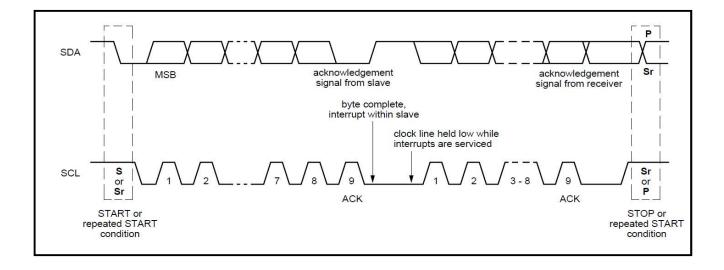

Rev. 07.13.23\_#3.8




The LCM600 series is compliant with the industry standard PMBus<sup>TM</sup> protocol for monitoring and control of the power supply via the I<sup>2</sup>C interface port.

#### LCM600 Series PMBus™ General Instructions

#### **Equipment Setup**

The following is typical I<sup>2</sup>C communication setup:

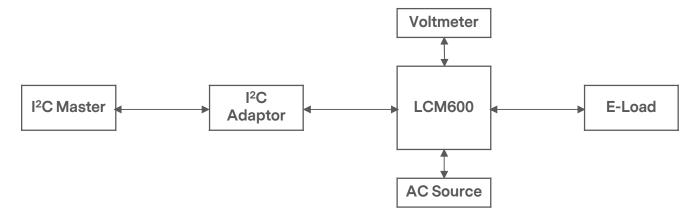

#### PMBus™ Writing Instructions

When writing to any PMBus  $^{\text{TM}}$  R/W registers, ALWAYS do the following:

Disable Write Protect (command 10h) by writing any of the following accordingly:

Levels: 00h - Enable writing to all writeable commends

20h - Disables write except 10h, 01h, 00h, 02h and 21h commands

40h - Disables write except 10h, 01h, and 00h commends

80h - Disable write except 0x00h

To save changes on the USER PMBus™ Table:

Use send byte command: 15h STORE\_USER\_ALL

Wait for 5 seconds, turn-off the PSU, wait for another 5 seconds before turning it on.



The LCM600L Supported PMBus™ Command List (the default value shown in below table is for LCM600L model only):

| Command<br>Code | Command Name               | Default Value | Access<br>Type | Data Bytes | Data<br>Format | Description  |
|-----------------|----------------------------|---------------|----------------|------------|----------------|--|
| 03h             | CLEAR_FAULTS               | -             | S              | 1          | Tormat         |  |
| 10h             | WRITE_PROTECT              | 00            | R/W            | 1          | MSF            | Used to Control Writing to the PMBus Device 80h - Disables write except 10h 40h - Disables write except 10h, 01h, 00h 20h - Disables write except 10h, 01h,00h,02h and 21h commands 00h - Enables write to all writeable commands. |
| 15h             | STORE_USER_ALL             | -             | S              | 0          |                | Copies the operating memory table to the matching USER non-volatile memory.  |
| 20h             | VOUT_MODE                  | 17            | R              | 1          | Linear         | Specifies the mode and parameters of output voltage related data formats.  |
| 21h             | VOUT_COMMAND               | 1800          | R              | 2          | Linear         | Output voltage reference (12V)   |
| 24h             | VOUT_MAX                   |               | R              | 2          | Linear         | Sets the max adjustable output voltage limit. (14.688V)  |
| 31h             | POUT_MAX                   |               | R              | 2          | Linear         | Sets the operating power limit condition. (600W)   |
| 40h             | VOUT_OV_FAULT_LIMIT        |               | R/W            | 2          | Linear         | Sets output over voltage threshold. (15V)  |
| 41h             | VOUT_OV_FAULT_RESPON<br>SE | C0            | R              | 1          | MSF            | Unit latches OFF. Resets on PSON or CONTROL pin recycle or AC recycle.   |
| 42h             | VOUT_OV_WARN_LIMIT         |               | R              | 2          | Linear         | Sets over-voltage warning threshold. (14.699V)   |
| 43h             | VOUT_UV_WARN_LIMIT         |               | R              | 2          | Linear         | Sets under-voltage warning threshold. (7.949V)   |
| 44h             | VOUT_UV_FAULT_LIMIT        |               | R              | 2          | Linear         | Sets under-voltage fault threshold. (7.559V)   |
| 45h             | VOUT_UV_FAULT_RESPON<br>SE | C0            | R              | 1          | MSF            | Turn PSU OFF   |
| 46h             | IOUT_OC_FAULT_LIMIT        |               | R              | 2          | Linear         | Sets the over current threshold in Amps. (55A)   |
| 47h             | IOUT_OC_FAULT_RESPON<br>SE | C0            | R              | 1          | MSF            | OCP ride through if OCP persists.  |
| 4Ah             | IOUT_OC_WARN_LIMIT         |               | R              | 2          | Linear         | Sets the over current warning threshold in Amps. (54.5A)   |
| 4Fh             | OT_FAULT_LIMIT             |               | R              | 2          | Linear         | Secondary ambient temperature<br>Fault threshold, in degree C.<br>(130degC)  |
| 50h             | OT_FAULT_RESPONSE          | C0            | R              | 1          | MSF            | Turn PSU OFF and will retry indefinitely   |
| 51h             | OT_WARN_LIMIT              |               | R              | 2          | Linear         | Secondary ambient temperature warning threshold, in degree C. Operating limit. (125 degC)  |
| 5Eh             | POWER_GOOD_ON              |               | R              | 2          | Linear         | Sets the threshold by which the Power Good signal is asserted. (8.209V)  |



The LCM600L Supported PMBus  $^{\rm TM}$  Command List:

| Comman<br>d Code | Command Name           | Default Value | Access<br>Type | Data<br>Bytes | Data<br>Format | Description  |
|------------------|------------------------|---------------|----------------|---------------|----------------|--|
| 5Fh              | POWER_GOOD_OFF         |               | R              | 2             | Linear         | Sets the threshold by which the Power good signal is de-asserted. (7.209V)   |
| 60h              | TON_DELAY              |               | R              | 2             | Linear         | Sets the time (sec), from start<br>condition (Power ON) until the<br>output starts to rise. (1600ms)                   |
| 61h              | TON_RISE               |               | R              | 2             | Linear         | Sets the time (ms), for the output rises from 0 to regulation. (200ms)   |
| 64h              | TOFF_DELAY             |               | R              | 2             | Linear         | Sets the time (ms), from a stop<br>condition (Power OFF) until the<br>output starts to drop (converter<br>OFF). (20ms) |
| 78h              | STATUS_BYTE            | 00            | R              | 1             | Binary         | Returns the summary of critical faults.  |
|                  | b7 - BUSY              |               |                |               |                | Not support  |
|                  | b6 - OFF               |               |                |               |                | Unit is OFF.   |
|                  | b5 - VOUT_OV           |               |                |               |                | Output over voltage fault has occurred.  |
|                  | b4 - IOUT_OC           |               |                |               |                | Output over current fault has occurred.  |
|                  | b3 - VIN_UV            |               |                |               |                | Not support.   |
|                  | b2 - TEMPERATURE       |               |                |               |                | A temperature fault or warning has occurred.   |
|                  | b1 - CML               |               |                |               |                | Not support  |
|                  | b0 - NONE OF THE ABOVE |               |                |               |                | Not support  |
| 79h              | STATUS_WORD            | 0000          | R              | 2             | Binary         | Summary of units fault and warning status.   |
|                  | b15 - VOUT             |               |                |               |                | An output voltage fault or warning has occurred.   |
|                  | b14 - IOUT/POUT        |               |                |               |                | An output current or power fault or warning has occurred.  |
|                  | b13 - INPUT            |               |                |               |                | An input voltage, current or power fault or warning as occurred.   |
|                  | b12 - MFR              |               |                |               |                | A manufacturer specific fault or warning has occurred.   |
|                  | b11 - POWER_GOOD#      |               |                |               |                | The POWER_GOOD signal is de-asserted   |
|                  | b10 - FANS             |               |                |               |                | Not support.   |
|                  | b9 - OTHER             |               |                |               |                | Not support.   |
|                  | b8 - UKNOWN            |               |                |               |                | Not support  |
|                  | b7 - BUSY              |               |                |               |                | Not support  |
|                  | b6 - OFF               |               |                |               |                | Unit is OFF.   |



The LCM600L Supported PMBus  $^{\rm TM}$  Command List:

| Command<br>Code | Command Name              | Default Value | Access<br>Type | Data Bytes | Data<br>Format | Description                                    |
|-----------------|---------------------------|---------------|----------------|------------|----------------|--|
| 79h             | b5 - VOUT_OV              |               |                |            |                | Output over-voltage fault has occurred.        |
|                 | b4 - IOUT_OC              |               |                |            |                | Output over-current fault has occurred.        |
|                 | b3 - VIN_UV               |               |                |            |                | Not support                                    |
|                 | b2 - TEMPERATURE          |               |                |            |                | A temperature fault or warning has occurred.   |
|                 | b1 - CML                  |               |                |            |                | Not support                                    |
|                 | b0 -<br>NONE_OF_THE_ABOVE |               |                |            |                | Not support.                                   |
| 7Ah             | STATUS_VOUT               | 00            | R              | 1          | Binary         | Output voltage related faults and warnings     |
|                 | b7                        |               |                |            |                | VOUT over-voltage fault                        |
|                 | b6                        |               |                |            |                | VOUT over-voltage warning                      |
|                 | b5                        |               |                |            |                | VOUT under-voltage warning                     |
|                 | b4                        |               |                |            |                | VOUT under-voltage fault                       |
|                 | b3                        |               |                |            |                | Not support                                    |
|                 | b2                        |               |                |            |                | TON_MAX fault                                  |
|                 | b1                        |               |                |            |                | Not support                                    |
|                 | b0                        |               |                |            |                | Not support                                    |
| 7Bh             | STATUS_IOUT               | 00            | R              | 1          | Binary         | Output current related faults and warnings     |
|                 | b7                        |               |                |            |                | IOUT over current fault                        |
|                 | b6                        |               |                |            |                | Not support                                    |
|                 | b5                        |               |                |            |                | IOUT over current warning                      |
|                 | b4                        |               |                |            |                | Not support                                    |
|                 | b3                        |               |                |            |                | Not support                                    |
|                 | b2                        |               |                |            |                | Not support                                    |
|                 | b1                        |               |                |            |                | Not support                                    |
|                 | b0                        |               |                |            |                | Not support                                    |
| 7Dh             | STATUS_TEMPERATURE        | 00            | R              | 1          | Binary         | Temperature related faults and warnings        |
|                 | b7                        |               |                |            |                | Over-temperature fault                         |
|                 | b6                        |               |                |            |                | Over-temperature warning                       |
|                 | b5                        |               |                |            |                | Not support                                    |
|                 | b4                        |               |                |            |                | Not support                                    |
|                 | b3:0                      |               | _              |            |                | reserved                                       |
| 8Bh             | READ_VOUT                 | -             | R              | 2          | Linear         | Returns the actual, measured voltage in Volts. |
| 8Ch             | READ_IOUT                 | -             | R              | 2          | Linear         | Returns the output current in amperes.         |



The LCM600L Supported PMBus  $^{\rm TM}$  Command List:

| Command<br>Code | Command Name       | Default Value            | Access<br>Type | Data Bytes | Data<br>Format | Description  |
|-----------------|--------------------|--------------------------|----------------|------------|----------------|--|
| 8Dh             | READ_TEMPERATURE_1 | -                        | R              | 2          | Linear         |  |
| 96h             | READ_POUT          | -                        | R              | 2          | Linear         | Returns the output power, in Watts.  |
| 99h             | MFR_ID             |                          | R/W            | 7          | ASCII          |  |
| 9Ah             | MFR_MODEL          | 4C,43,4D,36,30,<br>30,4C | R/W            | 7          | ASCII          | LCM600L  |
| 9Bh             | MFR_REVISION       | 41,45                    | R/W            | 2          | ASCII          |  |
| 9Ch             | MFR_LOCATION       | 4C,41,47,55,4E,<br>41    | R/W            | 6          | ASCII          | Laguna   |
| 9Eh             | MFR_DATE           |                          | R/W            | 13         | ASCII          | 13 CHAR  |
| A0h             | MFR_VIN_MIN        |                          | R              | 2          | Linear         | Minimum input voltage (100Vac)   |
| A1h             | MFR_VIN_MAX        |                          | R              | 2          | Linear         | Maximum input voltage (240Vac)   |
| A2h             | MFR_IIN_MAX        |                          | R              | 2          | Linear         | Maximum input current (8.5A)   |
| A4h             | MFR_VOUT_MIN       |                          | R              | 2          | Linear         | Minimum output voltage regulation window (9.408V)                          |
| A5h             | MFR_VOUT_MAX       |                          | R              | 2          | Linear         | Maximum output voltage. regulation window (14.688V)                        |
| A6h             | MFR_IOUT_MAX       |                          | R              | 2          | Linear         | Maximum output current (52A)   |
| A7h             | MFR_POUT_MAX       |                          | R              | 2          | Linear         | Maximum output power (600W)  |
| A8h             | MFR_TAMBIENT_MAX   |                          | R              | 2          | Linear         | Maximum operating ambient temperature (Secondary Ambient) (70 degC)        |
| A9h             | MFR_TAMBIENT_MIN   |                          | R              | 2          | Linear         | Minimum operating ambient<br>temperature (Secondary Ambient)<br>(-40 degC) |
| D5h             | Code revision      |                          | R              | 8          | ASCII          |  |



The LCM600N Supported PMBus  $^{\text{TM}}$  Command List (the default value shown in below table is for LCM600N model only):

| Command<br>Code | Command Name               | Default Value | Access<br>Type | Data Bytes | Data<br>Format | Description   |
|-----------------|----------------------------|---------------|----------------|------------|----------------|---|
| 03h             | CLEAR_FAULTS               | -             | S              | 1          |                |   |
| 10h             | WRITE_PROTECT              | 00            | R/W            | 1          | MSF            | Used to control writing to the PMBus device 80h - Disables write except 10h 40h - Disables write except 10h, 01h, 00h 20h - Disables write except 10h, 01h, 00h, 02h and 21h commands 00h - Enables write to all writeable commands |
| 15h             | STORE_USER_ALL             | -             | S              | 0          |                | Copies the operating memory table to the matching USER non-volatile memory.   |
| 20h             | VOUT_MODE                  | 17            | R              | 1          | Linear         | Specifies the mode and parameters of output voltage related data formats  |
| 21h             | VOUT_COMMAND               | 1E00          | R              | 2          | Linear         | Output voltage reference (15V)  |
| 24h             | VOUT_MAX                   |               | R              | 2          | Linear         | Sets the max adjustable output voltage limit. (19.889V)   |
| 31h             | POUT_MAX                   |               | R              | 2          | Linear         | Sets the operating power limit condition. (600W)  |
| 40h             | VOUT_OV_FAULT_LIMIT        |               | R/W            | 2          | Linear         | Sets output over voltage threshold. (21.2V)   |
| 41h             | VOUT_OV_FAULT_RESPON<br>SE | C0            | R              | 1          | MSF            | Unit latches OFF. Resets on PSON or CONTROL pin recycle or AC recycle.  |
| 42h             | VOUT_OV_WARN_LIMIT         |               | R              | 2          | Linear         | Sets over-voltage warning threshold. (20.199V)  |
| 43h             | VOUT_UV_WARN_LIMIT         |               | R              | 2          | Linear         | Sets under-voltage warning threshold. (13.818V)   |
| 44h             | VOUT_UV_FAULT_LIMIT        |               | R              | 2          | Linear         | Sets under-voltage fault threshold. (13.148V)   |
| 45h             | VOUT_UV_FAULT_RESPON<br>SE | C0            | R              | 1          | MSF            | Turn PSU OFF  |
| 46h             | IOUT_OC_FAULT_LIMIT        |               | R              | 2          | Linear         | Sets the over current threshold in Amps. (44.875A)  |
| 47h             | IOUT_OC_FAULT_RESPON<br>SE | C0            | R              | 1          | MSF            | OCP ride through if OCP persists.   |
| 4Ah             | IOUT_OC_WARN_LIMIT         |               | R              | 2          | Linear         | Sets the over current warning threshold in Amps. (44.375A)  |
| 4Fh             | OT_FAULT_LIMIT             |               | R              | 2          | Linear         | Secondary ambient temperature fault threshold, in degree C. (130degC)   |
| 50h             | OT_FAULT_RESPONSE          | C0            | R              | 1          | MSF            | Turn PSU OFF and will retry indefinitely  |
| 51h             | OT_WARN_LIMIT              |               | R              | 2          | Linear         | Secondary ambient temperature warning threshold, in degree C. Operating limit. (125degC)  |
| 5Eh             | POWER_GOOD_ON              |               | R              | 2          | Linear         | Sets the threshold by which the Power Good signal is asserted. (14.27V)   |



The LCM600N Supported PMBus  $^{\text{TM}}$  Command List:

| Command<br>Code | Command Name           | Default Value | Access<br>Type | Data Bytes | Data<br>Format | Description  |
|-----------------|------------------------|---------------|----------------|------------|----------------|--|
| 5Fh             | POWER_GOOD_OFF         |               | R              | 2          | Linear         | Sets the threshold by which the Power Good signal is de-asserted. (13.27V)   |
| 60h             | TON_DELAY              |               | R              | 2          | Linear         | Sets the time (sec), from start<br>condition (Power ON) until the<br>output starts to rise. (1600ms)                   |
| 61h             | TON_RISE               |               | R              | 2          | Linear         | Sets the time (ms), for the output rises from 0 to regulation. (200ms)   |
| 64h             | TOFF_DELAY             |               | R              | 2          | Linear         | Sets the time (ms), from a stop<br>condition (Power OFF) until the<br>output starts to drop (converter<br>OFF). (20ms) |
| 78h             | STATUS_BYTE            | 00            | R              | 1          | Binary         | Returns the summary of critical faults.  |
|                 | b7 - BUSY              |               |                |            |                | Not support  |
|                 | b6 - OFF               |               |                |            |                | Unit is OFF.   |
|                 | b5 - VOUT_OV           |               |                |            |                | Output over voltage fault has occurred.  |
|                 | b4 - IOUT_OC           |               |                |            |                | Output over current fault has occurred.  |
|                 | b3 - VIN_UV            |               |                |            |                | Not support.   |
|                 | b2 - TEMPERATURE       |               |                |            |                | A temperature fault or warning has occurred.   |
|                 | b1 - CML               |               |                |            |                | Not support  |
|                 | b0 - NONE OF THE ABOVE |               |                |            |                | Not support  |
| 79h             | STATUS_WORD            | 0000          | R              | 2          | Binary         | Summary of units fault and warning status.   |
|                 | b15 - VOUT             |               |                |            |                | An output voltage fault or warning has occurred.   |
|                 | b14 - IOUT/POUT        |               |                |            |                | An output current or power fault or warning has occurred.  |
|                 | b13 - INPUT            |               |                |            |                | An input voltage, current or power fault or warning as occurred.   |
|                 | b12 - MFR              |               |                |            |                | A manufacturer specific fault or warning has occurred.   |
|                 | b11 - POWER_GOOD#      |               |                |            |                | The POWER_GOOD signal is de-asserted   |
|                 | b10 - FANS             |               |                |            |                | Not support.   |
|                 | b9 - OTHER             |               |                |            |                | Not support.   |
|                 | b8 - UKNOWN            |               |                |            |                | Not support  |
|                 | b7 - BUSY              |               |                |            |                | Not support  |
|                 | b6 - OFF               |               |                |            |                | Unit is OFF.   |



The LCM600N Supported PMBus  $^{\text{TM}}$  Command List:

| Command<br>Code | Command Name              | Default Value | Access<br>Type | Data Bytes | Data<br>Format | Description                                    |
|-----------------|---------------------------|---------------|----------------|------------|----------------|--|
| 79h             | b5 - VOUT_OV              |               |                |            |                | Output over-voltage fault has occurred.        |
|                 | b4 - IOUT_OC              |               |                |            |                | Output over-current fault has occurred.        |
|                 | b3 - VIN_UV               |               |                |            |                | Not support                                    |
|                 | b2 - TEMPERATURE          |               |                |            |                | A temperature fault or warning has occurred.   |
|                 | b1 - CML                  |               |                |            |                | Not support                                    |
|                 | b0 -<br>NONE_OF_THE_ABOVE |               |                |            |                | Not support.                                   |
| 7Ah             | STATUS_VOUT               | 00            | R              | 1          | Binary         | Output voltage related faults and warnings     |
|                 | b7                        |               |                |            |                | VOUT over-voltage fault                        |
|                 | b6                        |               |                |            |                | VOUT over-voltage warning                      |
|                 | b5                        |               |                |            |                | VOUT under-voltage warning                     |
|                 | b4                        |               |                |            |                | VOUT under-voltage fault                       |
|                 | b3                        |               |                |            |                | Not support                                    |
|                 | b2                        |               |                |            |                | TON_MAX fault                                  |
|                 | b1                        |               |                |            |                | Not support                                    |
|                 | b0                        |               |                |            |                | Not support                                    |
| 7Bh             | STATUS_IOUT               | 00            | R              | 1          | Binary         | Output current related faults and warnings     |
|                 | b7                        |               |                |            |                | IOUT over current fault                        |
|                 | b6                        |               |                |            |                | Not support                                    |
|                 | b5                        |               |                |            |                | IOUT over current warning                      |
|                 | b4                        |               |                |            |                | Not support                                    |
|                 | b3                        |               |                |            |                | Not support                                    |
|                 | b2                        |               |                |            |                | Not support                                    |
|                 | b1                        |               |                |            |                | Not support                                    |
|                 | b0                        |               |                |            |                | Not support                                    |
| 7Dh             | STATUS_TEMPERATURE        | 00            | R              | 1          | Binary         | Temperature related faults and warnings        |
|                 | b7                        |               |                |            |                | Over-temperature fault                         |
|                 | b6                        |               |                |            |                | Over-temperature warning                       |
|                 | b5                        |               |                |            |                | Not support                                    |
|                 | b4                        |               |                |            |                | Not support                                    |
|                 | b3:0                      |               |                |            |                | reserved                                       |
| 81h             | STATUS_FANS_1_2           | 00            | R              | 1          | Binary         |  |
| 8Bh             | READ_VOUT                 | -             | R              | 2          | Linear         | Returns the actual, measured voltage in Volts. |



The LCM600N Supported PMBus  $^{\text{TM}}$  Command List:

| Command<br>Code | Command Name       | Default Value            | Access<br>Type | Data Bytes | Data<br>Format | Description   |
|-----------------|--------------------|--------------------------|----------------|------------|----------------|---|
| 8Ch             | READ_IOUT          | -                        | R              | 2          | Linear         | Returns the output current in amperes.                              |
| 8Dh             | READ_TEMPERATURE_1 | -                        | R              | 2          | Linear         |   |
| 96h             | READ_POUT          | -                        | R              | 2          | Linear         | Returns the output power, in Watts.                                 |
| 99h             | MFR_ID             |                          | R/W            | 7          | ASCII          |   |
| 9Ah             | MFR_MODEL          | 4C,43,4D,36,30,<br>30,4E | R/W            | 7          | ASCII          | LCM600N   |
| 9Bh             | MFR_REVISION       | 41,43                    | R/W            | 2          | ASCII          |   |
| 9Ch             | MFR_LOCATION       | 4C,41,47,55,4E,<br>41    | R/W            | 6          | ASCII          | Laguna  |
| 9Eh             | MFR_DATE           |                          | R/W            | 13         | ASCII          | 13 CHAR   |
| A0h             | MFR_VIN_MIN        |                          | R              | 2          | Linear         | Minimum input voltage (100Vac)                                      |
| A1h             | MFR_VIN_MAX        |                          | R              | 2          | Linear         | Maximum input voltage (240Vac)                                      |
| A2h             | MFR_IIN_MAX        |                          | R              | 2          | Linear         | Maximum input current (8.5A)  |
| A4h             | MFR_VOUT_MIN       |                          | R              | 2          | Linear         | Minimum output voltage regulation window. (11.76V)                  |
| A5h             | MFR_VOUT_MAX       |                          | R              | 2          | Linear         | Maximum output voltage.<br>regulation window (19.889V)              |
| A6h             | MFR_IOUT_MAX       |                          | R              | 2          | Linear         | Maximum output current (44A)  |
| A7h             | MFR_POUT_MAX       |                          | R              | 2          | Linear         | Maximum output power(600W)  |
| A8h             | MFR_TAMBIENT_MAX   |                          | R              | 2          | Linear         | Maximum operating ambient temperature (Secondary ambient) (70degC)  |
| A9h             | MFR_TAMBIENT_MIN   |                          | R              | 2          | Linear         | Minimum operating ambient temperature (Secondary ambient) (-40degC) |
| D5h             | Code revision      |                          | R              | 8          | ASCII          |   |



The LCM600Q Supported PMBus  $^{TM}$  Command List (the default value shown in below table is for LCM600Q model only):

| Command<br>Code | Command Name               | Default Value | Access<br>Type | Data Bytes | Data<br>Format | Description  |
|-----------------|----------------------------|---------------|----------------|------------|----------------|--|
| 03h             | CLEAR_FAULTS               | -             | S              | 1          |                |  |
| 10h             | WRITE_PROTECT              | 80            | R/W            | 1          | MSF            | Used to control writing to the pmbus device 80h - Disables write except 10h 40h - Disables write except 10h, 01h, 00h 20h - Disables write except 10h, 01h,00h,02h and 21h commands 00h - Enables write to all writeable commands. |
| 15h             | STORE_USER_ALL             | -             | S              | 0          |                | Copies the operating memory table to the matching USER non-volatile memory.  |
| 20h             | VOUT_MODE                  | 17            | R              | 1          | Linear         | Specifies the mode and parameters of output voltage related data formats.  |
| 21h             | VOUT_COMMAND               | 3000          | R              | 2          | Linear         | Output voltage reference (24V)   |
| 24h             | VOUT_MAX                   | 30F6          | R              | 2          | Linear         | Sets the max adjustable output voltage limit. (24.48V)   |
| 31h             | POUT_MAX                   | 0258          | R              | 2          | Linear         | Sets the operating power limit condition. (600W)   |
| 40h             | VOUT_OV_FAULT_LIMIT        | 3E00          | R/W            | 2          | Linear         | Sets output over voltage threshold. (31V)  |
| 41h             | VOUT_OV_FAULT_RESPON<br>SE | C0            | R              | 1          | MSF            | Unit latches OFF. Resets on PSON or CONTROL pin recycle or AC recycle.   |
| 42h             | VOUT_OV_WARN_LIMIT         | 3C00          | R              | 2          | Linear         | Sets over-voltage warning threshold. (30V)   |
| 43h             | VOUT_UV_WARN_LIMIT         | 2400          | R              | 2          | Linear         | Sets under-voltage warning threshold. (18V)  |
| 44h             | VOUT_UV_FAULT_LIMIT        | 1E00          | R              | 2          | Linear         | Sets under-voltage fault threshold. (15V)  |
| 45h             | VOUT_UV_FAULT_RESPON<br>SE | C0            | R              | 1          | MSF            | Turn PSU OFF   |
| 46h             | IOUT_OC_FAULT_LIMIT        | DB80          | R              | 2          | Linear         | Sets the over current threshold in Amps. (28A)   |
| 47h             | IOUT_OC_FAULT_RESPON<br>SE | C0            | R              | 1          | MSF            | OCP ride through if OCP persists.  |
| 4Ah             | IOUT_OC_WARN_LIMIT         | DB50          | R              | 2          | Linear         | Sets the over current warning threshold in Amps. (26.5A)   |
| 4Fh             | OT_FAULT_LIMIT             | EB98          | R              | 2          | Linear         | Secondary ambient temperature fault threshold, in degree C. (115degC)  |
| 50h             | OT_FAULT_RESPONSE          | C0            | R              | 1          | MSF            | Turn PSU OFF and will retry indefinitely   |
| 51h             | OT_WARN_LIMIT              | EB70          | R              | 2          | Linear         | Secondary ambient temperature warning threshold, in degree C. Operating limit. (110degC)   |
| 5Eh             | POWER_GOOD_ON              | 2600          | R              | 2          | Linear         | Sets the threshold by which the Power Good signal is asserted. (19V)   |



Rev. 07.13.23\_#3.8 advancedenergy.com 53

The LCM600Q Supported PMBus  $^{\rm TM}$  Command List:

| Command<br>Code | Command Name           | Default Value | Access<br>Type | Data Bytes | Data<br>Format | Description  |
|-----------------|------------------------|---------------|----------------|------------|----------------|--|
| 5Fh             | POWER_GOOD_OFF         | 2400          | R              | 2          | Linear         | Sets the threshold by which the Power Good signal is de-asserted. (18V)  |
| 60h             | TON_DELAY              | BB33          | R              | 2          | Linear         | Sets the time (sec), from start<br>condition (Power ON) until the<br>output starts to rise. (1600ms)                   |
| 61h             | TON_RISE               | 9A66          | R              | 2          | Linear         | Sets the time (ms), for the output rises from 0 to regulation. (200ms)   |
| 64h             | TOFF_DELAY             | 8A8F          | R              | 2          | Linear         | Sets the time (ms), from a stop<br>condition (Power OFF) until the<br>output starts to drop (converter<br>OFF). (20ms) |
| 78h             | STATUS_BYTE            | 00            | R              | 1          | Binary         | Returns the summary of critical faults.  |
|                 | b7 - BUSY              |               |                |            |                | Not support  |
|                 | b6 - OFF               |               |                |            |                | Unit is OFF.   |
|                 | b5 - VOUT_OV           |               |                |            |                | Output over voltage fault has occurred.  |
|                 | b4 - IOUT_OC           |               |                |            |                | Output over current fault has occurred.  |
|                 | b3 - VIN_UV            |               |                |            |                | Not support.   |
|                 | b2 - TEMPERATURE       |               |                |            |                | A temperature fault or warning has occurred.   |
|                 | b1 - CML               |               |                |            |                | Not support  |
|                 | b0 - NONE OF THE ABOVE |               |                |            |                | Not support  |
| 79h             | STATUS_WORD            | 0000          | R              | 2          | Binary         | Summary of units fault and warning status.   |
|                 | b15 - VOUT             |               |                |            |                | An output voltage fault or warning has occurred.   |
|                 | b14 - IOUT/POUT        |               |                |            |                | An output current or power fault or warning has occurred.  |
|                 | b13 - INPUT            |               |                |            |                | An input voltage, current or power fault or warning as occurred.   |
|                 | b12 - MFR              |               |                |            |                | A manufacturer specific fault or warning has occurred.   |
|                 | b11 - POWER_GOOD#      |               |                |            |                | The POWER_GOOD signal is de-asserted   |
|                 | b10 - FANS             |               |                |            |                | Not support.   |
|                 | b9 - OTHER             |               |                |            |                | Not support.   |
|                 | b8 - UKNOWN            |               |                |            |                | Not support  |
|                 | b7 - BUSY              |               |                |            |                | Not support  |
|                 | b6 - OFF               |               |                |            |                | Unit is OFF.   |



The LCM600Q Supported PMBus  $^{\rm TM}$  Command List:

| Command<br>Code | Command Name              | Default Value | Access<br>Type | Data Bytes | Data<br>Format | Description                                    |
|-----------------|---------------------------|---------------|----------------|------------|----------------|--|
|                 | b5 - VOUT_OV              |               |                |            |                | Output over-voltage fault has occurred.        |
|                 | b4 - IOUT_OC              |               |                |            |                | Output over-current fault has occurred.        |
| 79h             | b3 - VIN_UV               |               |                |            |                | Not support                                    |
| 7911            | b2 - TEMPERATURE          |               |                |            |                | A temperature fault or warning has occurred.   |
|                 | b1 - CML                  |               |                |            |                | Not support                                    |
|                 | b0 -<br>NONE_OF_THE_ABOVE |               |                |            |                | Not support.                                   |
|                 | STATUS_VOUT               | 00            | R              | 1          | Binary         | Output voltage related faults and warnings     |
|                 | b7                        |               |                |            |                | VOUT over-voltage fault                        |
|                 | b6                        |               |                |            |                | VOUT over-voltage warning                      |
| 7.4.1           | b5                        |               |                |            |                | VOUT under-voltage warning                     |
| 7Ah             | b4                        |               |                |            |                | VOUT under-voltage fault                       |
|                 | b3                        |               |                |            |                | Not support                                    |
|                 | b2                        |               |                |            |                | TON_MAX fault                                  |
|                 | b1                        |               |                |            |                | Not support                                    |
|                 | b0                        |               |                |            |                | Not support                                    |
| 7Bh             | STATUS_IOUT               | 00            | R              | 1          | Binary         | Output current related faults and warnings     |
|                 | b7                        |               |                |            |                | IOUT over current fault                        |
|                 | b6                        |               |                |            |                | Not support                                    |
|                 | b5                        |               |                |            |                | IOUT over current warning                      |
|                 | b4                        |               |                |            |                | Not support                                    |
|                 | b3                        |               |                |            |                | Not support                                    |
|                 | b2                        |               |                |            |                | Not support                                    |
|                 | b1                        |               |                |            |                | Not support                                    |
|                 | b0                        |               |                |            |                | Not support                                    |
| 7Dh             | STATUS_TEMPERATURE        | 00            | R              | 1          | Binary         | Temperature related faults and warnings        |
|                 | b7                        |               |                |            |                | Over-temperature fault                         |
|                 | b6                        |               |                |            |                | Over-temperature warning                       |
|                 | b5                        |               | _              |            |                | Not support                                    |
|                 | b4                        |               |                |            |                | Not support                                    |
|                 | b3:0                      |               |                |            |                | reserved                                       |
| 8Bh             | READ_VOUT                 | -             | R              | 2          | Linear         | Returns the actual, measured voltage in Volts. |



The LCM600Q Supported PMBus  $^{\rm TM}$  Command List:

| Command<br>Code | Command Name       | Default Value               | Access<br>Type | Data Bytes | Data<br>Format | Description   |
|-----------------|--------------------|-----------------------------|----------------|------------|----------------|---|
| 8Ch             | READ_IOUT          | -                           | R              | 2          | Linear         | Returns the output current in amperes.                              |
| 8Dh             | READ_TEMPERATURE_2 | -                           | R              | 2          | Linear         |   |
| 96h             | READ_POUT          | -                           | R              | 2          | Linear         | Returns the output power, in Watts.                                 |
| 99h             | MFR_ID             |                             | R/W            | 7          | ASCII          |   |
| 9Ah             | MFR_MODEL          | 07,4C,43,4D,36,<br>30,30,51 | R/W            | 7          | ASCII          | LCM600Q   |
| 9Bh             | MFR_REVISION       | 02,20,20                    | R/W            | 2          | ASCII          |   |
| 9Ch             | MFR_LOCATION       | 06,4C,61,67,75,<br>6E,61    | R/W            | 6          | ASCII          | Laguna  |
| 9Eh             | MFR_DATE           |                             | R/W            | 13         | ASCII          | 13 CHAR   |
| A0h             | MFR_VIN_MIN        | EB20                        | R              | 2          | Linear         | Minimum input voltage (100Vac)                                      |
| A1h             | MFR_VIN_MAX        | F3C0                        | R              | 2          | Linear         | Maximum input voltage (240Vac)                                      |
| A2h             | MFR_IIN_MAX        | D220                        | R              | 2          | Linear         | Maximum input current (8.5A)  |
| A4h             | MFR_VOUT_MIN       | 2F0A                        | R              | 2          | Linear         | Minimum output voltage regulation window (23.52V)                   |
| A5h             | MFR_VOUT_MAX       | 30F6                        | R              | 2          | Linear         | Maximum output voltage regulation window (24.48V)                   |
| A6h             | MFR_IOUT_MAX       | DB20                        | R              | 2          | Linear         | Maximum output current (25A)  |
| A7h             | MFR_POUT_MAX       | 0258                        | R              | 2          | Linear         | Maximum output power (600W)   |
| A8h             | MFR_TAMBIENT_MAX   | EA30                        | R              | 2          | Linear         | Maximum operating ambient temperature (Secondary ambient) (70degC)  |
| A9h             | MFR_TAMBIENT_MIN   | E580                        | R              | 2          | Linear         | Minimum operating ambient temperature (Secondary ambient) (-40degC) |
| D5h             | Code revision      |                             | R              | 8          | ASCII          |   |



 $The \ LCM600U \ Supported \ PMBus^{TM} \ Command \ List: (the \ default \ value \ shown \ in \ below \ table \ is \ for \ LCM600U \ model \ only):$ 

| Command<br>Code | Command Name               | Default Value | Access<br>Type | Data Bytes | Data<br>Format | Description  |
|-----------------|----------------------------|---------------|----------------|------------|----------------|--|
| 03h             | CLEAR_FAULTS               | -             | S              | 1          | Tormat         |  |
| 10h             | WRITE_PROTECT              | 00            | R/W            | 1          | MSF            | Used to control writing to the pmbus device 80h - Disables write except 10h 40h - Disables write except 10h, 01h, 00h 20h - Disables write except 10h, 01h,00h,02h and 21h commands 00h - Enables write to all writeable commands. |
| 15h             | STORE_USER_ALL             | -             | S              | 0          |                | Copies the operating memory table to the matching USER non-volatile memory.  |
| 20h             | VOUT_MODE                  | 17            | R              | 1          | Linear         | Specifies the mode and parameters of output voltage related data formats.  |
| 21h             | VOUT_COMMAND               | 4800          | R              | 2          | Linear         | Output voltage reference (36V)   |
| 24h             | VOUT_MAX                   |               | R              | 2          | Linear         | Sets the max adjustable output voltage limit. (43.2V)  |
| 31h             | POUT_MAX                   |               | R              | 2          | Linear         | Sets the operating power limit condition. (600W)   |
| 40h             | VOUT_OV_FAULT_LIMIT        |               | R/W            | 2          | Linear         | Sets output over voltage threshold. (49V)  |
| 41h             | VOUT_OV_FAULT_RESPON<br>SE | C0            | R              | 1          | MSF            | Unit latches OFF. Resets on PSON or CONTROL pin recycle or AC recycle.   |
| 42h             | VOUT_OV_WARN_LIMIT         |               | R              | 2          | Linear         | Sets over-voltage warning threshold. (44.059V)   |
| 43h             | VOUT_UV_WARN_LIMIT         |               | R              | 2          | Linear         | Sets under-voltage warning threshold. (33.318V)  |
| 44h             | VOUT_UV_FAULT_LIMIT        |               | R              | 2          | Linear         | Sets under-voltage fault threshold. (31.689V)  |
| 45h             | VOUT_UV_FAULT_RESPON<br>SE | C0            | R              | 1          | MSF            | Turn PSU OFF   |
| 46h             | IOUT_OC_FAULT_LIMIT        |               | R              | 2          | Linear         | Sets the over current threshold in Amps. (19A)   |
| 47h             | IOUT_OC_FAULT_RESPON<br>SE | C0            | R              | 1          | MSF            | OCP ride through. If OCP persists.   |
| 4Ah             | IOUT_OC_WARN_LIMIT         |               | R              | 2          | Linear         | Sets the over current warning threshold in Amps. (18.5A)   |
| 4Fh             | OT_FAULT_LIMIT             |               | R              | 2          | Linear         | Secondary ambient temperature fault threshold, in degree C. (125degC)  |
| 50h             | OT_FAULT_RESPONSE          | C0            | R              | 1          | MSF            | Turn PSU OFF and will retry indefinitely.  |
| 51h             | OT_WARN_LIMIT              |               | R              | 2          | Linear         | Secondary ambient temperature warning threshold, in degree C. Operating limit. (110degC)   |
| 5Eh             | POWER_GOOD_ON              |               | R              | 2          | Linear         | Sets the threshold by which the Power Good signal is asserted. (34.398V)   |



Rev. 07.13.23\_#3.8 advancedenergy.com 57

The LCM600U Supported PMBus  $^{\text{TM}}$  Command List:

| Command<br>Code | Command Name           | Default Value | Access<br>Type | Data Bytes | Data<br>Format | Description  |
|-----------------|------------------------|---------------|----------------|------------|----------------|--|
| 5Fh             | POWER_GOOD_OFF         |               | R              | 2          | Linear         | Sets the threshold by which the Power Good signal is de-asserted. (33.398V)  |
| 60h             | TON_DELAY              |               | R              | 2          | Linear         | Sets the time (sec), from start<br>condition (Power ON) until the<br>output starts to rise. (1600ms)                   |
| 61h             | TON_RISE               |               | R              | 2          | Linear         | Sets the time (ms), for the output rises from 0 to regulation. (200ms)   |
| 64h             | TOFF_DELAY             |               | R              | 2          | Linear         | Sets the time (ms), from a stop<br>condition (Power OFF) until the<br>output starts to drop (converter<br>OFF). (20ms) |
| 78h             | STATUS_BYTE            | 00            | R              | 1          | Binary         | Returns the summary of critical faults.  |
|                 | b7 - BUSY              |               |                |            |                | Not support  |
|                 | b6 - OFF               |               |                |            |                | Unit is OFF.   |
|                 | b5 - VOUT_OV           |               |                |            |                | Output over voltage fault has occurred.  |
|                 | b4 - IOUT_OC           |               |                |            |                | Output over current fault has occurred.  |
|                 | b3 - VIN_UV            |               |                |            |                | Not support.   |
|                 | b2 - TEMPERATURE       |               |                |            |                | A temperature fault or warning has occurred.   |
|                 | b1 - CML               |               |                |            |                | Not support  |
|                 | b0 - NONE OF THE ABOVE |               |                |            |                | Not support  |
| 79h             | STATUS_WORD            | 0000          | R              | 2          | Binary         | Summary of units fault and warning status.   |
|                 | b15 - VOUT             |               |                |            |                | An output voltage fault or warning has occurred.   |
|                 | b14 - IOUT/POUT        |               |                |            |                | An output current or power fault or warning has occurred.  |
|                 | b13 - INPUT            |               |                |            |                | An input voltage, current or power fault or warning as occurred.   |
|                 | b12 - MFR              |               |                |            |                | A manufacturer specific fault or warning has occurred.   |
|                 | b11 - POWER_GOOD#      |               |                |            |                | The POWER_GOOD signal is de-asserted   |
|                 | b10 - FANS             |               |                |            |                | Not support.   |
|                 | b9 - OTHER             |               |                |            |                | Not support.   |
|                 | b8 - UKNOWN            |               |                |            |                | Not support  |
|                 | b7 - BUSY              |               |                |            |                | Not support  |
|                 | b6 - OFF               |               |                |            |                | Unit is OFF.   |



The LCM600U Supported PMBus  $^{\text{TM}}$  Command List:

| Command<br>Code | Command Name              | Default Value | Access<br>Type | Data Bytes | Data<br>Format | Description                                    |
|-----------------|---------------------------|---------------|----------------|------------|----------------|--|
| 79h             | b5 - VOUT_OV              |               |                |            |                | Output over-voltage fault has occurred.        |
|                 | b4 - IOUT_OC              |               |                |            |                | Output over-current fault has occurred.        |
|                 | b3 - VIN_UV               |               |                |            |                | Not support                                    |
|                 | b2 - TEMPERATURE          |               |                |            |                | A temperature fault or warning has occurred.   |
|                 | b1 - CML                  |               |                |            |                | Not support                                    |
|                 | b0 -<br>NONE_OF_THE_ABOVE |               |                |            |                | Not support.                                   |
| 7Ah             | STATUS_VOUT               | 00            | R              | 1          | Binary         | Output voltage related faults and warnings     |
|                 | b7                        |               |                |            |                | VOUT over-voltage fault                        |
|                 | b6                        |               |                |            |                | VOUT over-voltage warning                      |
|                 | b5                        |               |                |            |                | VOUT under-voltage warning                     |
|                 | b4                        |               |                |            |                | VOUT under-voltage fault                       |
|                 | b3                        |               |                |            |                | Not support                                    |
|                 | b2                        |               |                |            |                | TON_MAX fault                                  |
|                 | b1                        |               |                |            |                | Not support                                    |
|                 | b0                        |               |                |            |                | Not support                                    |
| 7Bh             | STATUS_IOUT               | 00            | R              | 1          | Binary         | Output current related faults and warnings     |
|                 | b7                        |               |                |            |                | IOUT over current fault                        |
|                 | b6                        |               |                |            |                | Not support                                    |
|                 | b5                        |               |                |            |                | IOUT over current warning                      |
|                 | b4                        |               |                |            |                | Not support                                    |
|                 | b3                        |               |                |            |                | Not support                                    |
|                 | b2                        |               |                |            |                | Not support                                    |
|                 | b1                        |               |                |            |                | Not support                                    |
|                 | b0                        |               |                |            |                | Not support                                    |
| 7Dh             | STATUS_TEMPERATURE        | 00            | R              | 1          | Binary         | Temperature related faults and warnings        |
|                 | b7                        |               |                |            |                | Over-temperature fault                         |
|                 | b6                        |               |                |            |                | Over-temperature warning                       |
|                 | b5                        |               |                |            |                | Not support                                    |
|                 | b4                        |               |                |            |                | Not support                                    |
|                 | b3:0                      |               |                |            |                | reserved                                       |
| 8Bh             | READ_VOUT                 | -             | R              | 2          | Linear         | Returns the actual, measured voltage in Volts. |



The LCM600U Supported PMBus  $^{\text{TM}}$  Command List:

| Command<br>Code | Command Name       | Default Value            | Access<br>Type | Data Bytes | Data<br>Format | Description   |
|-----------------|--------------------|--------------------------|----------------|------------|----------------|---|
| 8Ch             | READ_IOUT          | -                        | R              | 2          | Linear         | Returns the output current in amperes.                              |
| 8Dh             | READ_TEMPERATURE_1 | -                        | R              | 2          | Linear         |   |
| 96h             | READ_POUT          | -                        | R              | 2          | Linear         | Returns the output power, in Watts.                                 |
| 99h             | MFR_ID             |                          | R/W            | 7          | ASCII          |   |
| 9Ah             | MFR_MODEL          | 4C,43,4D,36,30,<br>30,55 | R/W            | 7          | ASCII          | LCM600U   |
| 9Bh             | MFR_REVISION       | 41,41                    | R/W            | 2          | ASCII          |   |
| 9Ch             | MFR_LOCATION       | 4C,41,47,55,4E,<br>41    | R/W            | 6          | ASCII          | Laguna  |
| 9Eh             | MFR_DATE           |                          | R/W            | 13         | ASCII          | 13 CHAR   |
| A0h             | MFR_VIN_MIN        |                          | R              | 2          | Linear         | Minimum input voltage (100Vac)                                      |
| A1h             | MFR_VIN_MAX        |                          | R              | 2          | Linear         | Maximum input voltage (240Vac)                                      |
| A2h             | MFR_IIN_MAX        |                          | R              | 2          | Linear         | Maximum input current (9A)  |
| A4h             | MFR_VOUT_MIN       |                          | R              | 2          | Linear         | Minimum output voltage regulation window (28.8V)                    |
| A5h             | MFR_VOUT_MAX       |                          | R              | 2          | Linear         | Maximum output voltage. regulation window (43.2V)                   |
| A6h             | MFR_IOUT_MAX       |                          | R              | 2          | Linear         | Maximum output current (18A)  |
| A7h             | MFR_POUT_MAX       |                          | R              | 2          | Linear         | Maximum output power (600W)   |
| A8h             | MFR_TAMBIENT_MAX   |                          | R              | 2          | Linear         | Maximum operating ambient temperature (Secondary ambient) (70degC)  |
| A9h             | MFR_TAMBIENT_MIN   |                          | R              | 2          | Linear         | Minimum operating ambient temperature (Secondary ambient) (-40degC) |
| D5h             | Code revision      |                          | R              | 8          | ASCII          |   |



 $The \ LCM600W \ Supported \ PMBus^{TM} \ Command \ List \ (the \ default \ value \ shown \ in \ below \ table \ is \ for \ LCM600W \ model \ only):$ 

| Command<br>Code | Command Name               | Default Value | Access<br>Type | Data Bytes | Data<br>Format | Description  |
|-----------------|----------------------------|---------------|----------------|------------|----------------|--|
| 03h             | CLEAR_FAULTS               | -             | S              | 1          |                |  |
| 10h             | WRITE_PROTECT              | 00            | R/W            | 1          | MSF            | Used to control writing to the pmbus device 80h - Disables write except 10h 40h - Disables write except 10h, 01h, 00h 20h - Disables write except 10h, 01h,00h,02h and 21h commands 00h - Enables write to all writeable commands. |
| 15h             | STORE_USER_ALL             | -             | S              | 0          |                | Copies the operating memory table to the matching USER non-volatile memory.  |
| 20h             | VOUT_MODE                  | 17            | R              | 1          | Linear         | Specifies the mode and parameters of output voltage related data formats.  |
| 21h             | VOUT_COMMAND               | 6000          | R              | 2          | Linear         | Output voltage reference (48V)   |
| 24h             | VOUT_MAX                   |               | R              | 2          | Linear         | Sets the max adjustable output voltage limit. (56V)  |
| 31h             | POUT_MAX                   |               | R              | 2          | Linear         | Sets the operating power limit condition. (600W)   |
| 46h             | IOUT_OC_FAULT_LIMIT        |               | R              | 2          | Linear         | Sets the over current threshold in Amps. (13.797A)   |
| 47h             | IOUT_OC_FAULT_RESPON<br>SE | C0            | R              | 1          | MSF            | OCP ride through. If OCP persists.   |
| 4Ah             | IOUT_OC_WARN_LIMIT         |               | R              | 2          | Linear         | Sets the over current warning threshold in Amps. (13.297A)   |
| 4Fh             | OT_FAULT_LIMIT             |               | R              | 2          | Linear         | Secondary ambient temperature<br>fault threshold, in degree C.<br>(115degC)  |
| 50h             | OT_FAULT_RESPONSE          | C0            | R              | 1          | MSF            | Turn PSU OFF and will retry indefinitely.  |
| 51h             | OT_WARN_LIMIT              |               | R              | 2          | Linear         | Secondary ambient temperature warning threshold, in degree C. Operating limit. (110degC)   |
| 5Eh             | POWER_GOOD_ON              |               | R              | 2          | Linear         | Sets the threshold by which the Power Good signal is asserted. (41.828V)   |
| 5Fh             | POWER_GOOD_OFF             |               | R              | 2          | Linear         | Sets the threshold by which the Power Good signal is de-asserted. (40.828V)  |
| 60h             | TON_DELAY                  |               | R              | 2          | Linear         | Sets the time (sec), from start condition (Power ON) until the output starts to rise. (1600ms)   |
| 61h             | TON_RISE                   |               | R              | 2          | Linear         | Sets the time (ms), for the output rises from 0 to regulation. (200ms)   |
| 64h             | TOFF_DELAY                 | 8A8F          | R              | 2          | Linear         | Sets the time (ms), from a stop<br>condition (Power OFF) until the<br>output starts to drop (converter<br>OFF). (20ms)   |



Rev. 07.13.23\_#3.8 advancedenergy.com 61

The LCM600W Supported PMBus  $^{\rm TM}$  Command List:

| Command<br>Code | Command Name              | Default Value | Access<br>Type | Data Bytes | Data<br>Format | Description  |
|-----------------|---------------------------|---------------|----------------|------------|----------------|--|
| 78h             | STATUS_BYTE               | 00            | R              | 1          | Binary         | Returns the summary of critical faults.                          |
|                 | b7 - BUSY                 |               |                |            |                | Not support  |
|                 | b6 - OFF                  |               |                |            |                | Unit is OFF.   |
|                 | b5 - VOUT_OV              |               |                |            |                | Output over voltage fault has occurred.                          |
|                 | b4 - IOUT_OC              |               |                |            |                | Output over current fault has occurred.                          |
|                 | b3 - VIN_UV               |               |                |            |                | Not support.   |
|                 | b2 - TEMPERATURE          |               |                |            |                | A temperature fault or warning has occurred.                     |
|                 | b1 - CML                  |               |                |            |                | Not support  |
|                 | b0 - NONE OF THE ABOVE    |               |                |            |                | Not support  |
| 79h             | STATUS_WORD               | 0000          | R              | 2          | Binary         | Summary of units fault and warning status.                       |
|                 | b15 - VOUT                |               |                |            |                | An output voltage fault or warning has occurred.                 |
|                 | b14 - IOUT/POUT           |               |                |            |                | An output current or power fault or warning has occurred.        |
|                 | b13 - INPUT               |               |                |            |                | An input voltage, current or power fault or warning as occurred. |
|                 | b12 - MFR                 |               |                |            |                | A manufacturer specific fault or warning has occurred.           |
|                 | b11 - POWER_GOOD#         |               |                |            |                | The POWER_GOOD signal is de-asserted                             |
|                 | b10 - FANS                |               |                |            |                | Not support.   |
|                 | b9 - OTHER                |               |                |            |                | Not support.   |
|                 | b8 - UKNOWN               |               |                |            |                | Not support  |
|                 | b7 - BUSY                 |               |                |            |                | Not support  |
|                 | b6 - OFF                  |               |                |            |                | Unit is OFF.   |
|                 | b5 - VOUT_OV              |               |                |            |                | Output over-voltage fault has occurred.                          |
|                 | b4 - IOUT_OC              |               |                |            |                | Output over-current fault has occurred.                          |
|                 | b3 - VIN_UV               |               |                |            |                | Not support  |
|                 | b2 - TEMPERATURE          |               |                |            |                | A temperature fault or warning has occurred.                     |
|                 | b1 - CML                  |               |                |            |                | Not support  |
|                 | b0 -<br>NONE_OF_THE_ABOVE |               |                |            |                | Not support.   |



The LCM600W Supported PMBus  $^{\rm TM}$  Command List:

| Command<br>Code | Command Name       | Default Value            | Access<br>Type | Data Bytes | Data<br>Format | Description                                    |
|-----------------|--------------------|--------------------------|----------------|------------|----------------|--|
| 7Ah             | STATUS_VOUT        | 00                       | R              | 1          | Binary         | Output voltage related faults and warnings     |
|                 | b7                 |                          |                |            |                | VOUT over-voltage fault                        |
|                 | b6                 |                          |                |            |                | VOUT over-voltage warning                      |
|                 | b5                 |                          |                |            |                | VOUT under-voltage warning                     |
|                 | b4                 |                          |                |            |                | VOUT under-voltage fault                       |
|                 | b3                 |                          |                |            |                | Not support                                    |
|                 | b2                 |                          |                |            |                | TON_MAX fault                                  |
|                 | b1                 |                          |                |            |                | Not support                                    |
|                 | b0                 |                          |                |            |                | Not support                                    |
| 7Bh             | STATUS_IOUT        | 00                       | R              | 1          | Binary         | Output current related faults and warnings     |
|                 | b7                 |                          |                |            |                | IOUT over current fault                        |
|                 | b6                 |                          |                |            |                | Not support                                    |
|                 | b5                 |                          |                |            |                | IOUT over current warning                      |
|                 | b4                 |                          |                |            |                | Not support                                    |
|                 | b3                 |                          |                |            |                | Not support                                    |
|                 | b2                 |                          |                |            |                | Not support                                    |
|                 | b1                 |                          |                |            |                | Not support                                    |
|                 | b0                 |                          |                |            |                | Not support                                    |
| 7Dh             | STATUS_TEMPERATURE | 00                       | R              | 1          | Binary         | Temperature related faults and warnings        |
|                 | b7                 |                          |                |            |                | Over-temperature fault                         |
|                 | b6                 |                          |                |            |                | Over-temperature warning                       |
|                 | b5                 |                          |                |            |                | Not support                                    |
|                 | b4                 |                          |                |            |                | Not support                                    |
|                 | b3:0               |                          |                |            |                | reserved                                       |
| 81h             | STATUS_FANS_1_2    | 00                       | R              | 1          | Binary         |  |
| 8Bh             | READ_VOUT          | -                        | R              | 2          | Linear         | Returns the actual, measured voltage in Volts. |
| 8Ch             | READ_IOUT          | -                        | R              | 2          | Linear         | Returns the output current in amperes.         |
| 8Dh             | READ_TEMPERATURE_2 | -                        | R              | 2          | Linear         |  |
| 96h             | READ_POUT          | -                        | R              | 2          | Linear         | Returns the output power, in Watts.            |
| 99h             | MFR_ID             |                          | R/W            | 7          | ASCII          |  |
| 9Ah             | MFR_MODEL          | 4C,43,40,36,30,<br>30,57 | R/W            | 7          | ASCII          | LCM600W  |
| 9Bh             | MFR_REVISION       | 30,30                    | R/W            | 2          | ASCII          |  |
| 9Ch             | MFR_LOCATION       | 4C,41,47,55,4E,<br>41    | R/W            | 6          | ASCII          | Laguna   |



The LCM600W Supported PMBus  $^{\rm TM}$  Command List:

| Command<br>Code | Command Name     | Default Value | Access<br>Type | Data Bytes | Data<br>Format | Description   |
|-----------------|------------------|---------------|----------------|------------|----------------|---|
| 9Eh             | MFR_DATE         |               | R/W            | 13         | ASCII          | 13 CHAR   |
| A0h             | MFR_VIN_MIN      |               | R              | 2          | Linear         | Minimum input voltage (100Vac)  |
| A1h             | MFR_VIN_MAX      |               | R              | 2          | Linear         | Maximum input voltage (240Vac)  |
| A2h             | MFR_IIN_MAX      |               | R              | 2          | Linear         | Maximum input current (9A)  |
| A4h             | MFR_VOUT_MIN     |               | R              | 2          | Linear         | Minimum output voltage regulation window (36V)                            |
| A5h             | MFR_VOUT_MAX     |               | R              | 2          | Linear         | Maximum output voltage. regulation window (56V)                           |
| A6h             | MFR_IOUT_MAX     |               | R              | 2          | Linear         | Maximum output current (13A)  |
| A7h             | MFR_POUT_MAX     |               | R              | 2          | Linear         | Maximum output power (600W)   |
| A8h             | MFR_TAMBIENT_MAX |               | R              | 2          | Linear         | Maximum operating ambient temperature (Secondary ambient) (70degC)        |
| A9h             | MFR_TAMBIENT_MIN |               | R              | 2          | Linear         | Minimum operating ambient<br>temperature (Secondary ambient)<br>(-40degC) |
| D5h             | Code revision    |               | R              | 8          | ASCII          |   |



### **APPLICATION NOTES**

#### **Current Sharing**

The LCM600 series main output V1 is equipped with current sharing capability. This will allow up to 10 power supplies to be connected in parallel for higher power application. Current share accuracy is typically 10% of full load. SWP Node voltage at full load is to be 5.5-6.5 Volts and 2.5-3.5 Volts at 50% of maximum current. The I<sup>2</sup>C Line should be connected separately when the number of units in parallel is more than 8.

The table below shows the derated maximum power capacity when units are in parallel configuration. This is to consider the 10% load sharing tolerance.

| Number of Units in<br>Parallel(N) | Maximum Output power<br>Rated + [(N-1) x 0.9] x Rated, Where: Rated - 600W, N -<br>Number of PSU in Parallel |
|-----------------------------------|--|
| Stand-alone 600W                  | 600W   |
| 2                                 | 1140W  |
| 3                                 | 1680W  |
|                                   |  |
|                                   |  |
| 10                                | 5460W  |


The PSU will have an active load sharing percentage as shown below.

| Rail Loading | ldeal 100% share is 50%/50%                          | Example, (Total - 50A)       |  |
|--------------|--|------------------------------|--|
| 100%         | 10%: Max 55%, Min 45% of load                        | 50A Total (27.5A to 22.5A)   |  |
| 50%          | 10%: Max 55%, Min 45% of load                        | 25A Total (13.75A to 11.25A) |  |
| 20%          | 20%: Max 60%, Min 40% of load                        | 10A Total (6A to 4A)         |  |
| Below 20%    | Must not draw current or suffer functional problems. | Not Specified.               |  |



### **APPLICATION NOTES**

#### **Redundant Operation Connection Diagram**

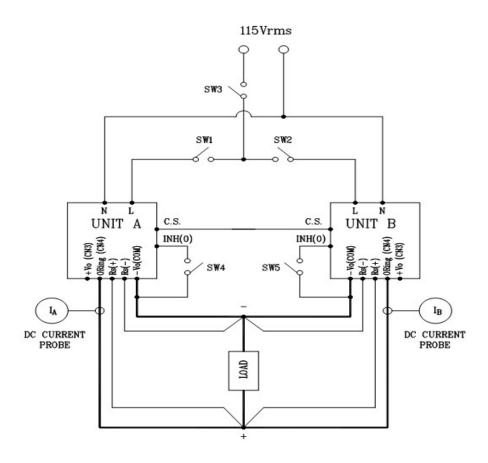

Note 1. Above figure shows connection for two power supply. Similar connection must below followed for higher number of power supplies connected. The maximum number of power supply is 8 power supply connection.

Note 2. PMBus address should be set unique per power supply.

Note 3. The G\_DCOK \_C pins and G\_ACOK\_C pins can be connected together to the system DCOK and ACOK input pins. This can also we wired separately so the system will still continue to operate in case 1 PSU fails. The system should have a 3 separate input for ACOK and DCOK signals.


Note 4. Read lout per power supply. The reported I-out per power supply should be the same or similar.



### **APPLICATION NOTES**

#### **Output Ripple and Noise Measurement**

The setup outlined in the diagram below has been used for output voltage ripple and noise measurements on the LCM600 series. When measuring output ripple and noise, a scope jack in parallel with a 0.1uF ceramic chip capacitor, and a 10 uF aluminum electrolytic capacitor should be used. Oscilloscope should be set to 20MHz bandwidth for this measurement.

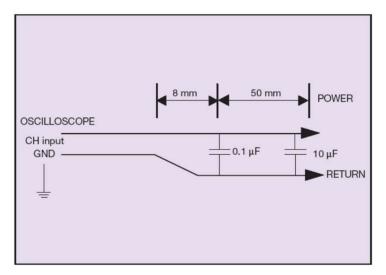



# RECORD OF REVISION AND CHANGES

| Issue | Date       | Description   | Originators        |
|-------|------------|---|--------------------|
| 1.0   | 08.01.2012 | First Issue   | V. Wei             |
| 1.1   | 08.01.2012 | Delete Global DCOK and ACOK signal SCH  | V. Wei             |
| 1.2   | 11.07.2012 | Add other product in the spec   | V. Wei             |
| 1.3   | 09.06.2013 | Update Global ACOK Circuit  | V. Wei             |
| 1.4   | 11.04.2013 | Update Command list 44h 46h WR  | V. Wei             |
| 1.5   | 12.29.2014 | Add the LCM600N   | V. Wei             |
| 1.6   | 04.28.2015 | Change the pull-up resistor of A0, A1, A2   | V. Wei             |
| 1.7   | 01.13.2016 | Updated the I <sup>2</sup> C detail   | V. Wei             |
| 1.8   | 05.03.2016 | Update page 2 module number/ Update the remote sense description  | K. Wang            |
| 1.9   | 06.03.2016 | Update Terminal block and IEC connector   | K. Wang            |
| 2.0   | 07.05.2016 | Update IEC connector  | K. Wang            |
| 2.1   | 11.08.2016 | Update the waveform figure 34 to figure 39 for Power Good   | K. Wang            |
| 2.2   | 01.26.2017 | Delete the 90h command  | K. Wang            |
| 2.3   | 09.12.2017 | Update the operating altitude   | A. Zhang           |
| 2.4   | 11.29.2017 | Update the safety certificates  | A. Zhang           |
| 2.5   | 03.26.2018 | 79H Fan fault waning is not support   | K. Wang            |
| 2.6   | 05.05.2019 | Update mating connectors / mechanical issue   | K. Wang            |
| 2.7   | 10.25.2019 | 1. Add "-N" "-8" suffix note<br>2. OVP point  | K. Wang            |
| 2.8   | 03.27.2020 | 1.Update the OCP description for L/N     2. Update dynamic     3. Add the isolation production spec   | K. Wang            |
| 2.9   | 05.05.2020 | Update leakage current specification  | C. Liu             |
| 3.0   | 07.07.2020 | 1. Update Safety Certifications 2. Remove suffix "-8"   | C. Yan/Kathy       |
| 3.1   | 06.22.2021 | Add system timing specification and description on page 7     2. Add system timing diagram on page 8     C. Liu     3. Add ACOK/DCOK signal waveforms in performance curves |                    |
| 3.2   | 09.15.2021 | Address A1/A2 not works. Only support B0 and B2 address.  | K. Wang            |
| 3.3   | 11.11.2021 | Update typo error from mF to uF   | K. Wang            |
| 3.4   | 01.24.2022 | Update UKCA and PMBus Logo  | K. Wang            |
| 3.5   | 02.07.2022 | Update timing diagram   | J. Zhang           |
| 3.6   | 06.27.2022 | Add 21h VOUT_COMMAND  | C. Liu             |
| 3.7   | 03.25.2023 | Add "-8" suffix option Update waveform description  | E. Wang<br>K. Wang |
| 3.8   | 07.13.2023 | Update 78h, 79h, 7Ah,7Bh,7Dh description<br>Update LED picture  | K. Wang            |



Rev. 07.13.23\_#3.8 advancedenergy.com 68



For international contact information, visit advancedenergy.com.

powersales@aei.com(Sales Support) productsupport.ep@aei.com(Technical Support) +1 888 412 7832

#### ABOUT ADVANCED ENERGY

Advanced Energy (AE) has devoted more than three decades to perfecting power for its global customers. AE designs and manufactures highly engineered, precision power conversion, measurement and control solutions for mission-critical applications and processes.

Our products enable customer innovation in complex applications for a wide range of industries including semiconductor equipment, industrial, manufacturing, telecommunications, data center computing, and medical. With deep applications know-how and responsive service and support across the globe, we build collaborative partnerships to meet rapid technological developments, propel growth for our customers, and innovate the future of power.

PRECISION | POWER | PERFORMANCE | TRUST

Specifications are subject to change without notice. Not responsible for errors or omissions. ©2022 Advanced Energy Industries, Inc. All rights reserved. Advanced Energy®, and AE® are U.S. trademarks of Advanced Energy Industries, Inc.